

HP MicroServer Remote Access Card

User Manual



Part Number: 664489-002
February 2013
Edition: 2

© Copyright 2011, 2013 Hewlett-Packard Development Company, L.P.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Microsoft and Windows are U.S. registered trademarks of Microsoft Corporation.

Intended audience

This document is for the person who installs, administers, and troubleshoots servers and storage systems. HP assumes you are qualified in the servicing of computer equipment and trained in recognizing hazards in products with hazardous energy levels.

Contents

Operational Overview	5
Guide Overview	5
BMC Overview.....	5
Server management through IPMI version 2.0 compliant applications.....	5
IPMI Messaging Interfaces	5
Sensors	6
External Event Generation.....	6
LAN Messaging.....	6
Platform Event Filtering (PEF) and Alert Policies.....	8
Firmware Firewall	8
Browser interface overview	8
Supported browsers and client operating systems.....	8
Supported server operating system software	8
BMC SETUP	9
Quick setup.....	9
Preparing to setup BMC.....	9
To reinstall the Remote Access Card.....	9
Configuring the IP address	10
Logging in to BMC Web for the first time.....	13
Logging in to BMC SMCLP for the first time.....	14
Configuring BMC.....	17
BMC Firmware Update User Guide	17
Update BMC Firmware via Web UI	17
Update BMC Firmware under DOS mode.....	20
Update Firmware under Windows	22
Update Firmware under Linux.....	24
User account and access	26
Encryption.....	26
Using Remote Access Card.....	27
Using BMC Web UI	27
Browser main menu options	27
Properties.....	28
Configuration	28
Network	28
Network Security	32
Security.....	32
Users	38
Services	39
IPMI.....	40
Sessions.....	41
Update	42
Preparation before online firmware flashing.....	42
Start to update firmware of Remote Access Card.....	42
Utilities.....	43
Power/Control.....	43
Thermal	44

Viewing sensor data from a web browser.....	44
Viewing sensors data from Rom-Based setup utility	44
System Event Log	45
Accessing the system event log from a web browser.....	46
Accessing the SEL from BIOS SETUP UTILITY	46
Event Management	47
Platform Events	47
Trap Settings	48
Email Settings	48
vKVM & vMedia	49
Using Virtual KVM Configuration.....	49
Using Virtual Media Configuration.....	52
Using BMC SMCLP	55
Get CPU/Memory Info	56
Get Thermal Reading/Get Fan Speed Reading	58
Get Fan Status	61
SMCLP Power Control Function.....	62
Frequently Asked Questions (FAQ)	63
Recovering a BMC username and password.....	63
Verifying that the BMC firmware is functioning.....	64
Recovering from a BMC firmware crash	64
How to configure BMC.....	64
Troubleshooting BMC	65
Heartbeat LED Indicator.....	65
System Event Log Entries	65
JVM Support.....	66
Login Issues	66
Firewall Issues	66
Proxy server issues	67
Glossary	68

Operational Overview

Guide Overview

The Remote Access Card provides multiple ways to configure, update, and operate servers remotely. This Remote Access Card User Guide describes these features and how to use them with the browser-based interface and RBSU.

The SMASH CLP is designed for users who prefer a non-graphical interface. The SMASH CLP chapter describes the syntax and the ways to remote control server.

BMC Overview

BMC can remotely perform most functions that otherwise require a visit to servers at the data center, computer room, or remote location. The following are just a few examples of using BMC features.

- BMC Remote Console and virtual power enables you to view a stalled remote server with blue screen conditions and restart the server without onsite assistance.
- BMC Virtual KVM technology provides a high-performance remote console that enables you to remotely administer operating systems and applications in everyday situations.
- BMC virtual CD/DVD-ROM or floppy enables you to install an operating system or flash system firmware over the network from images on your workstations or on centralized web servers.
- BMC actively participates in monitoring and maintaining server health, referred to as embedded health. BMC monitors temperatures in the server and sends corrective signals to the fans to maintain proper server cooling. In addition to temperature monitoring, BMC provides fan status monitoring.

Server management through IPMI version 2.0 compliant applications

Server management through the IPMI is a standardized method for controlling and monitoring the server. BMC provides server management based on the IPMI version 2.0 specification. The IPMI specification defines a standardized interface for platform management. The IPMI specification defines the following types of platform management:

- Monitoring of system information, such as fans, temperatures
- Recovery capabilities, such as system resets and power on/off operations
- Logging capabilities, for abnormal events such as over temperature readings or fan failures
- Inventory capabilities, such as identifying failed hardware components.

IPMI Messaging Interfaces

IPMI messaging interfaces will comply with IPMI v2.0, and supported interfaces include IPMI Messaging interfaces, Keyboard Controller Style (KCS) interface and IPMI LAN interface. The KCS

interface provides a set of I/O mapped communications registers. The default system base address for the I/O mapped KCS Interface is 0xCA2 and is byte aligned at this system address. The KCS interface is accessible to SMS software that is running on the local system. Examples of compatible SMS software applications are as follows:

- IPMI version 2.0 Command Test Tool is a low-level MS-DOS command line tool that enables hex formatted IPMI commands to be sent to an IPMI BMC that implements the KCS interface. You can locate this tool on the Intel® website (<http://www.intel.com/design/servers/ipmi/tools.htm>).
- IPMI tool is a utility for managing and configuring devices that support the IPMI version 1.5 and version 2.0 specifications and can be used in a Linux environment. You can locate this tool on the IPMI tool website (<http://ipmitool.sourceforge.net/index.html>). Before using linux ipmitool via system interface, please make sure installing Linux ipmi driver (Use the shell command “service ipmi start”).

Sensors

The BMC provide environmental monitoring through IPMI sensors. Sensors will be described in the SDR repository (IPMI v2.0, Chapter 33 SDR Repository) and can be accessed through the IPMI sensor device commands (IPMI v2.0, Chapter 35 Sensor Device Commands).

System configuration can be discovered through exploration of the SDR repository. IPMI provides a sixteen byte string identifier in each SDR. This ASCII based string will need to be interpreted by system management software. These tokens will be used in the SDR string identifier field and will provide any distinction needed in addition to the other fields of the SDR.

External Event Generation

The BMC is configured to send its alerts to another event receiver in the system. See IPMIv2.0 Chapter 29 Event Commands for more information. All events commands which are mandatory for an event generator are implemented in the BMC firmware.

LAN Messaging

The BMC will use on chip NIC to provide support for IPMI messaging over LAN. IPMI messages will be sent as RMCP packets by on chip NIC, which will pass the messages to the BMC via on chip NIC where the BMC will receive and respond to the messages. See the IPMIv2.0 specification Chapter 13 IPMI LAN Interface for more information. Four simultaneous LAN sessions will be supported. There is no limitation on the number of concurrent sessions for a single user.

All mandatory IPMI LAN messaging commands are implemented in the BMC Core Firmware. Section 18.1 of this document contains the list of supported optional LAN messaging commands. RMCP+ is supported under IPMI 2.0. This protocol enhancement conforms to the overall RMCP format. Extensions allow for multiple payload types, enhanced authentication, and encryption. Details can be found in IPMIv2.0 section 13.3 RMCP+.

IPMI Firmware supported optional encryption methods as below table (ID 0~14):

Key:

S = authenticated session setup (correct role, username and password/key required to establish session)

A = authenticated payload data supported.

E = authentication and encrypted payload data supported.

ID	Characteristics	Cipher Suite	Authentication Algorithm	Integrity Algorithm(s)	Confidentiality Algorithm(s)
0	"no password"	00h, 00h, 00h	RAKP-none	None	None
1	S	01h, 00h, 00h	RAKP-HMAC-SHA1	None	None
2	S, A	01h, 01h, 00h			None
3	S, A, E	01h, 01h, 01h			AES-CBC-128
4	S, A, E	01h, 01h, 02h			xRC4-128
5	S, A, E	01h, 01h, 03h			xRC4-40
6	S	02h, 00h, 00h	HMAC-MD5-128	None	None
7	S, A	02h, 02h, 00h			None
8	S, A, E	02h, 02h, 01h			AES-CBC-128
9	S, A, E	02h, 02h, 02h			xRC4-128
10	S, A, E	02h, 02h, 03h			xRC4-40
11	S, A	02h, 03h, 00h			None
12	S, A, E	02h, 03h, 01h	MD5-128		AES-CBC-128
13	S, A, E	02h, 03h, 02h			xRC4-128
14	S, A, E	02h, 03h, 03h			xRC4-40

Platform Event Filtering (PEF) and Alert Policies

PEF (IPMIv2.0, Chapter 17 Platform Event Filtering) will be supported to allow alerting in response to configured system events. On the HP MicroServer platform, the following event filters and alert policies will be implemented by default. Any additional filters or alert policies desired by the user must be configured using the Set PEF Configuration Parameters command discussed in Section 30.3 of the IPMIv2.0.

Firmware Firewall

The BMC supports firmware firewall which is an IPMI v2.0 optional capability that is supported on all BMC implementations. Details can be found in the IPMI v2.0 specification Chapter 21.

Browser interface overview

The BMC browser interface groups similar tasks for easy navigation and workflow. These tasks are organized under high-level tabs across the top of the BMC interface. These tabs are always visible and include Option, Properties, Configuration, Sessions, Update, Utilities, Power control, Thermal, System event log, VKVM&VMedia. Each high-level BMC tab has a menu on the left side of the interface with various options. This menu changes every time you select a different high-level tab, displaying the options available from that tab. Each menu option displays a page title, which is a description of the information or settings available on that page. This page title might not reflect the name displayed on the menu option. Assistance for all BMC pages is available from BMC Help. Links on each BMC page provide summary information about the features of BMC and helpful information to optimize its operation. To access page specific help, click the help link (Help) on the top and right side of the browser window.

Supported browsers and client operating systems

- Microsoft® Internet Explorer 8
- Microsoft® Internet Explorer 7
- Microsoft® Internet Explorer 6
- Firefox 3.x
- Firefox 2.0

The web server support both HTTP and HTTPS protocols

Supported server operating system software

BMC is an independent microprocessor running an embedded operating system. The architecture ensures that the majority of BMC functionality is available, regardless of the host operating system.

BMC SETUP

Quick setup

To quickly setup BMC using the default settings for BMC features, follow the steps below:


1. Prepare the hardware installation — Refer to the MicroServer Remote Access Card Installation Instructions for detail
2. If you are not using dynamic IP addressing, use the BIOS RBSU to configure a static IP address ("Configuring the IP address").
3. Methods for Log in: Users can either:
 - Log into BMC from a supported browser ("Logging in to BMC Web for the first time").
 - or
 - Log into SMCLP via a SSH client. ("Logging in to BMC SMCLP for the first time")

Preparing to setup BMC

Before setting up your BMC, you must install Remote Access Card and remove VGA cable from embedded VGA connector to VGA connector on the Remote Access Card. Since the server will export VGA signal via the VGA connector on this card automatically when the Remote Access Card is plugged (BIOS default setting).


To reinstall the Remote Access Card

1. Open the chassis and remove the system tray out of the chassis.
2. Lift the Remote Access Card to release it from the connector (1).

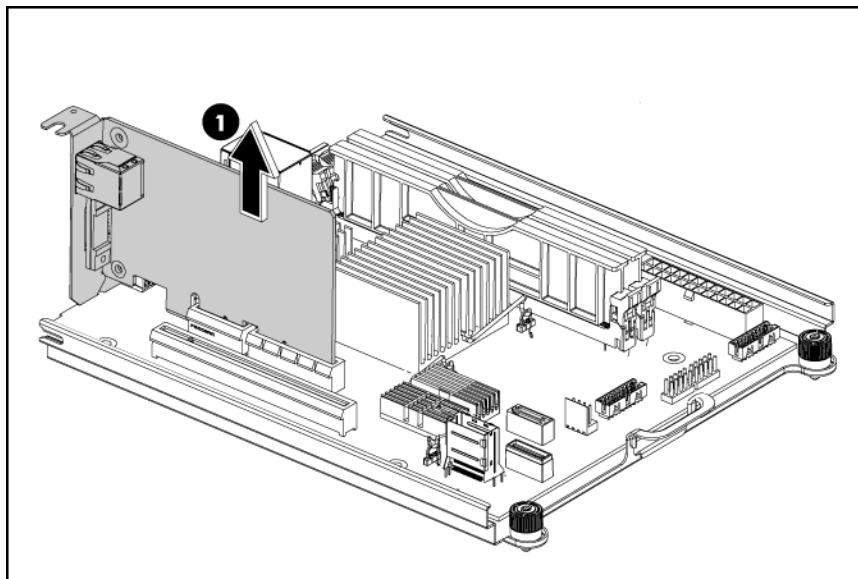


3. Put the card into an anti-static bag.

4. Install a new Remote Access Card:
 - Align the card with the system PCIE slot
 - Press the card down to ensure the full connection with the board.

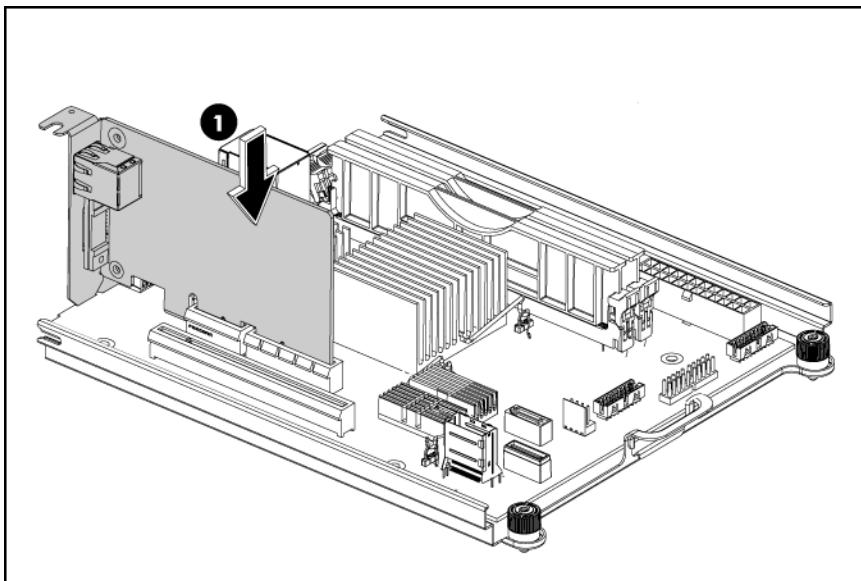

5. Follow the steps of installing the system tray.
6. Connect the VGA cable to the VGA port on the Remote Access Card.

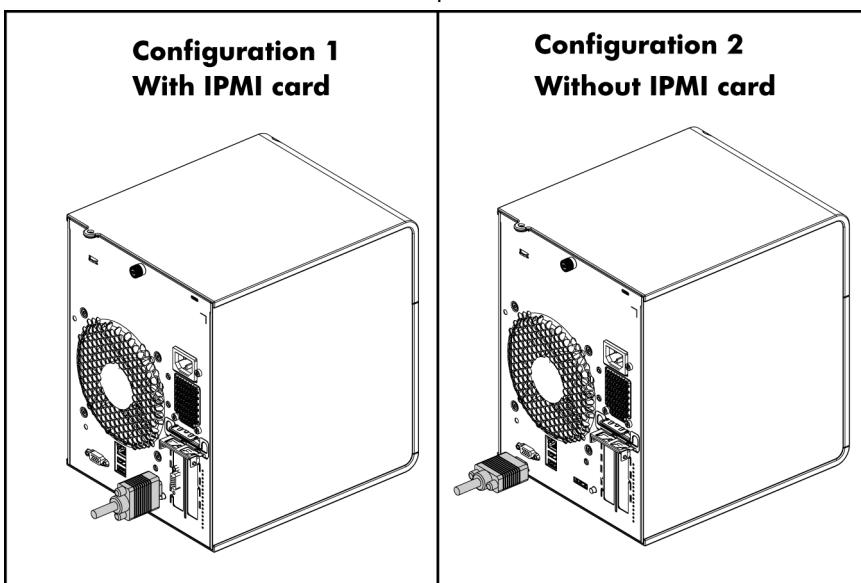


7. Power on the server, it will have BMC functions.

Configuring the IP address


The management processor acquires an IP address and subnet mask using either a dynamic or static process. When using dynamic IP address, your DHCP server will automatically assign an IP address for BMC.

Obtain the DHCP IP address, using Rom-Based Setup Utility with the following procedures:


1. Power on the server by pressing the Power on/Off button on the front panel
2. When POST prompts the message "press F10 for Rom-based setup Utility", press the F10 key, the main screen of the BIOS Setup Utility appears

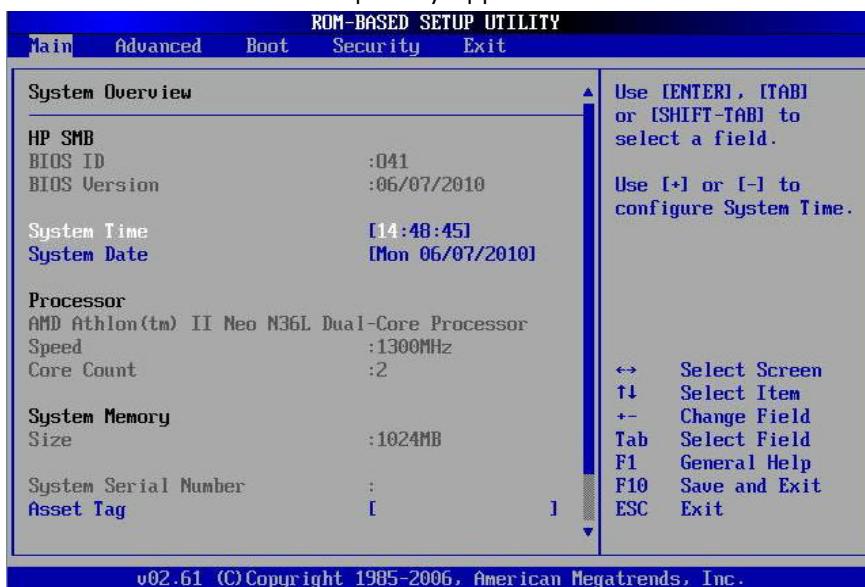

3. Press the right arrow (→) key to navigate to the "Advanced" menu.
4. Press the down arrow (↓) key to scroll to "IPMI Configuration". Press the "Enter" key.

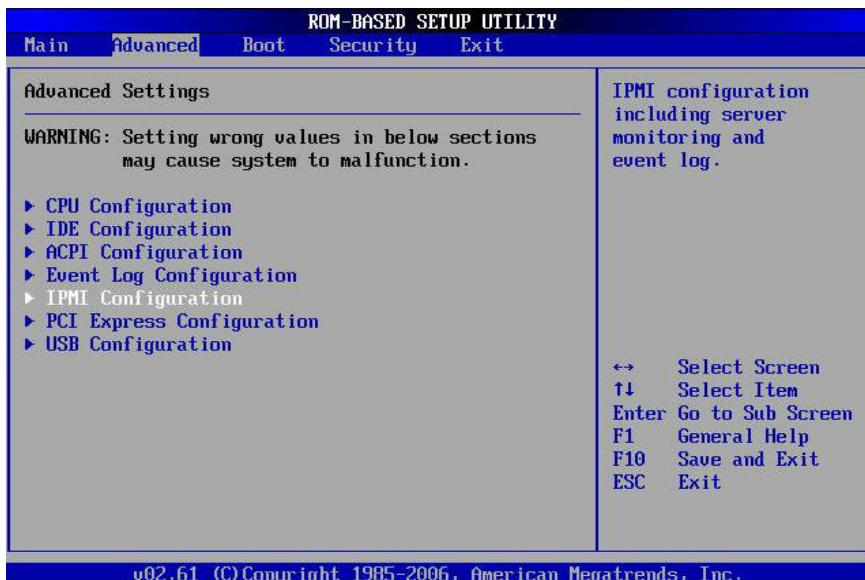


5. Press the down arrow (↓) key to scroll the "Set LAN Configuration" menu. Press the "Enter" key.

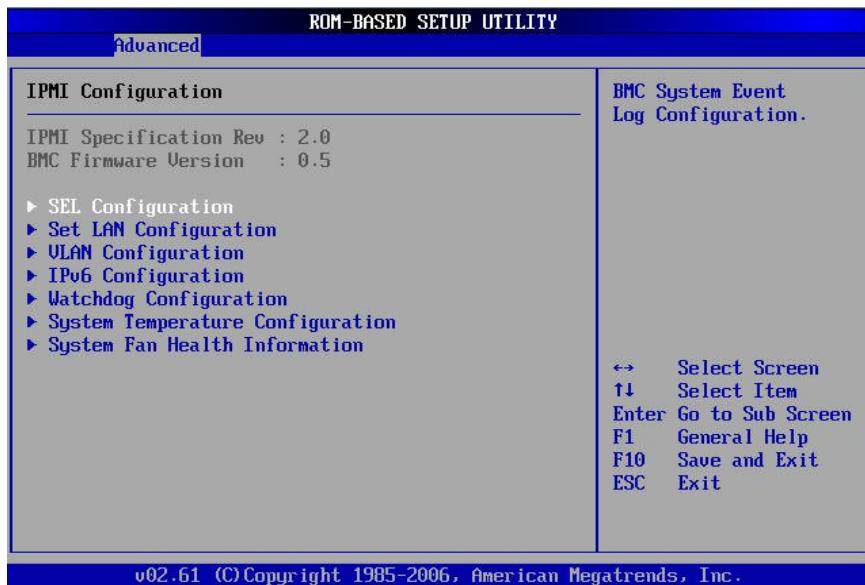

6. Set the "BMC LAN Configuration" to "DHCP"

7. Press the F10 key to save and exit RBSU

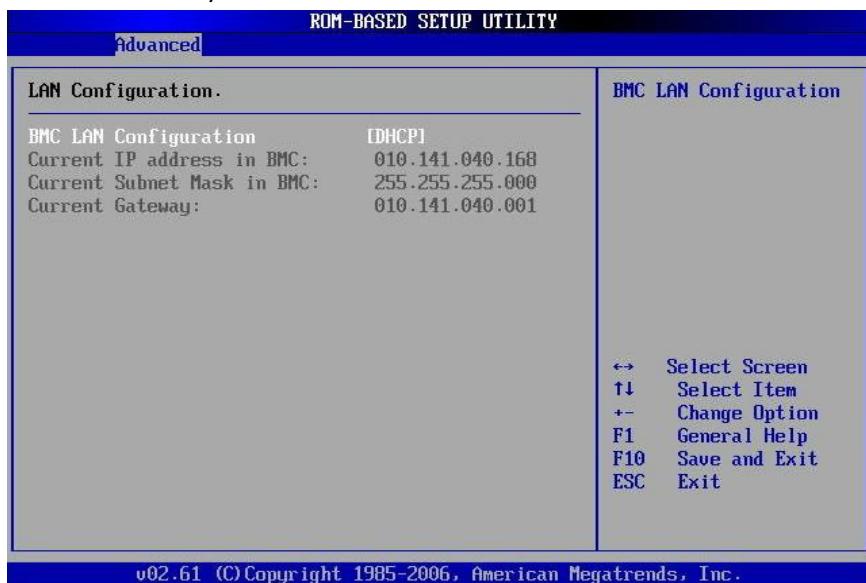

To configure a static IP address, use the RBSU with the following procedure to disable DHCP and configure the IP address and the subnet mask:


1. Power on the server by pressing the Power on/Off button on the front panel
2. When POST prompts the message "press F10 for Rom-based setup Utility", press the F10 key, the main screen of the BIOS Setup Utility appears
3. Press the right arrow (→) key to navigate to the "Advanced" menu.
4. Press the down arrow (↓) key to scroll to "IPMI Configuration". Press the Enter key.
5. Press the down arrow (↓) key to scroll the "Set LAN Configuration" menu. Press the Enter key.
6. On "BMC LAN Configuration", select "static"
7. Press the down arrow (↓) key to scroll down and enter a valid IP address, subnet mask, and gateway address (press period (.)) key to move between address fields).

8. Press the F10 key to save and exit RBSU.
9. With IP address, use SSH to log in to the remote management CLP, or use a web browser to access the HTML interface.


Logging in to BMC Web for the first time

BMC is configured with a default user name and password.


1. BMC is connected to the network through a NIC port (RJ45) on the Remote Access Card. If you want to access BMC via LAN, you need to connect the BMC LAN port and the switch via a network cable.

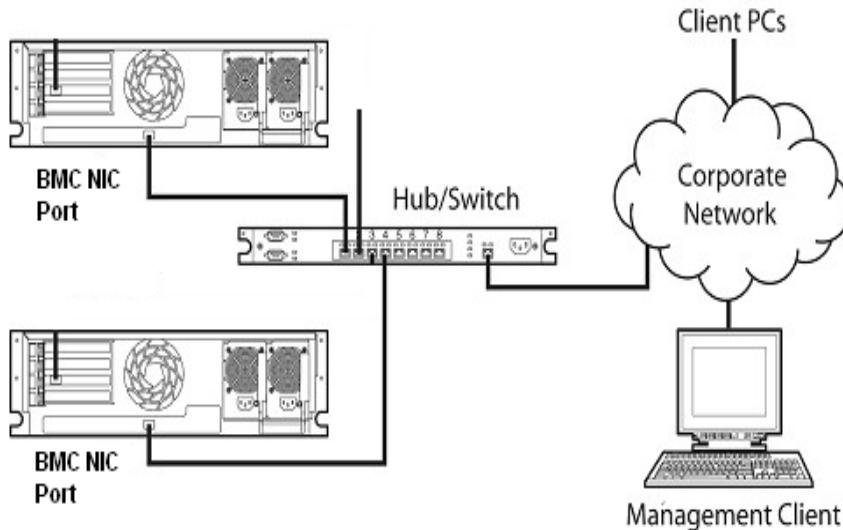

2. Get "BMC LAN configuration" from the RBSU

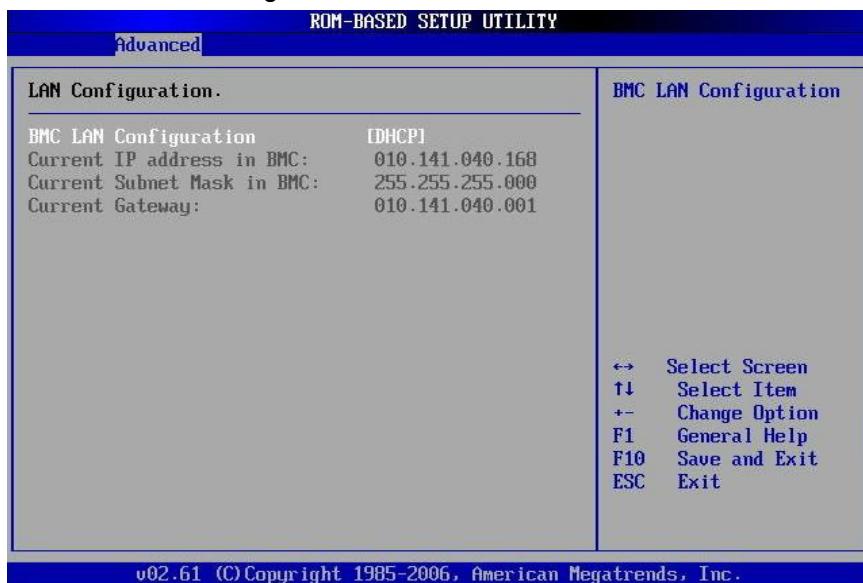

3. Use these values to access BMC remotely from a network client using a standard Web browser via the IP address of BMC.

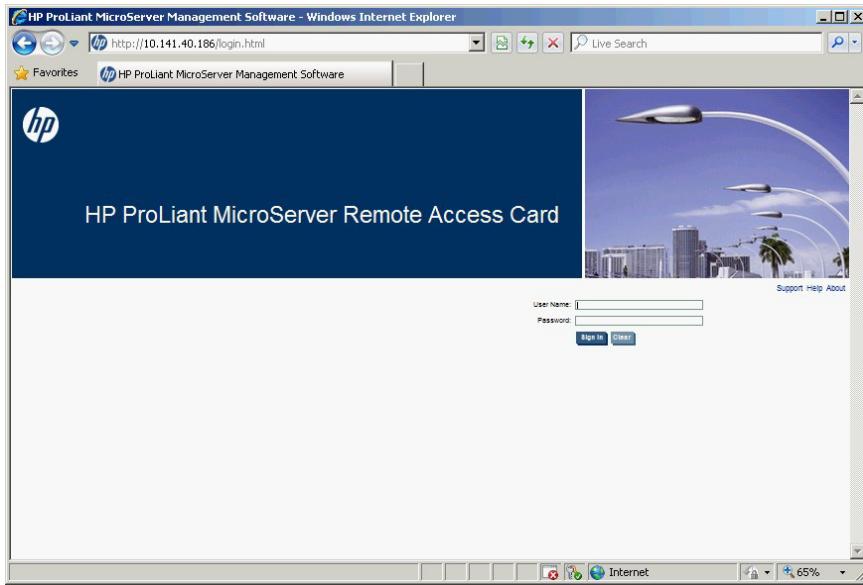

For security reasons, HP recommends changing the default settings after logging in to BMC for the first time.


The default values are:

- User name—admin
- Password—password


After input the default user name and password and click “sign in”, then you will log it successfully.

Logging in to BMC SMCLP for the first time

1. Get BMC IP address first as last section.

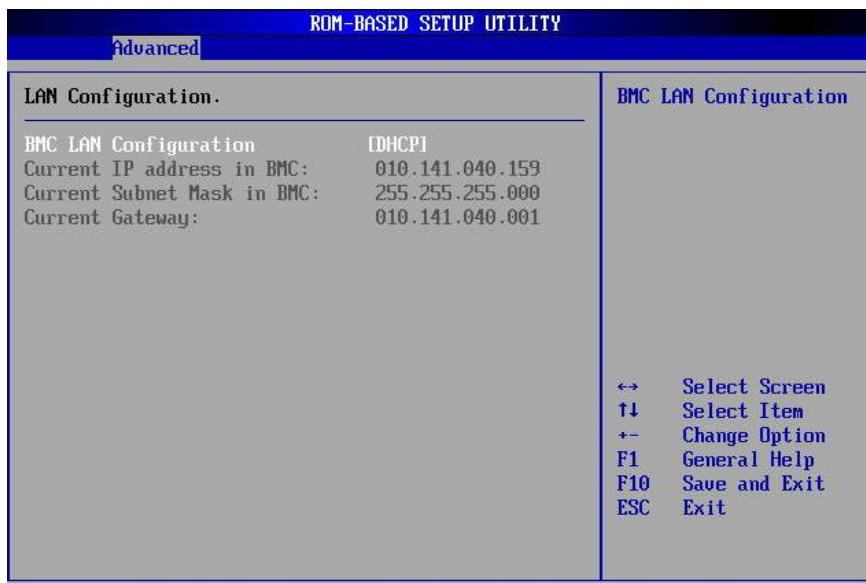


2. User SSH client to connect the BMC via the IP address. Enter the "Host Name" (IP address), and the "User Name" (such as admin). Then click the "Connect" button.

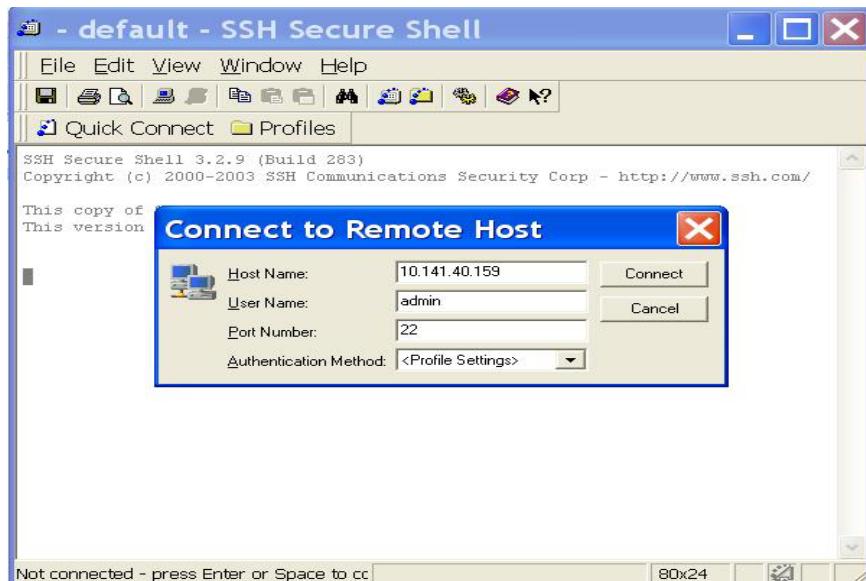

3. If connect OK, it will prompt "Enter Password". And enter the password.



4. Then it will login the CLP console.

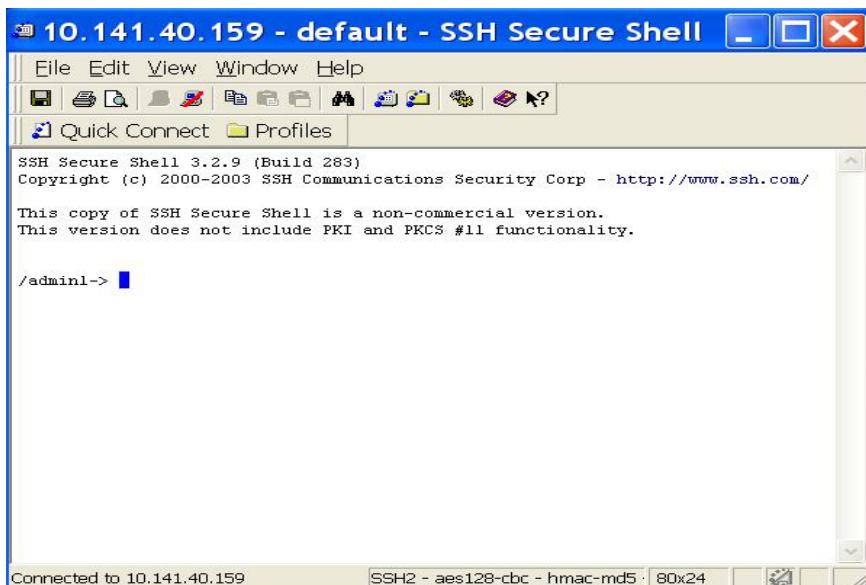

Configuring BMC

BMC Firmware Update User Guide

There are two methods to update BMC firmware.

- Update via Web UI


This method just can be used when old BMC firmware work normally and its Web UI can be login.

- Update under DOS mode


When BMC firmware crashes, you need to use this method to update BMC firmware.

Update BMC Firmware via Web UI


1. Log in the BMC Web, and you can update BMC firmware via "Update" web page.

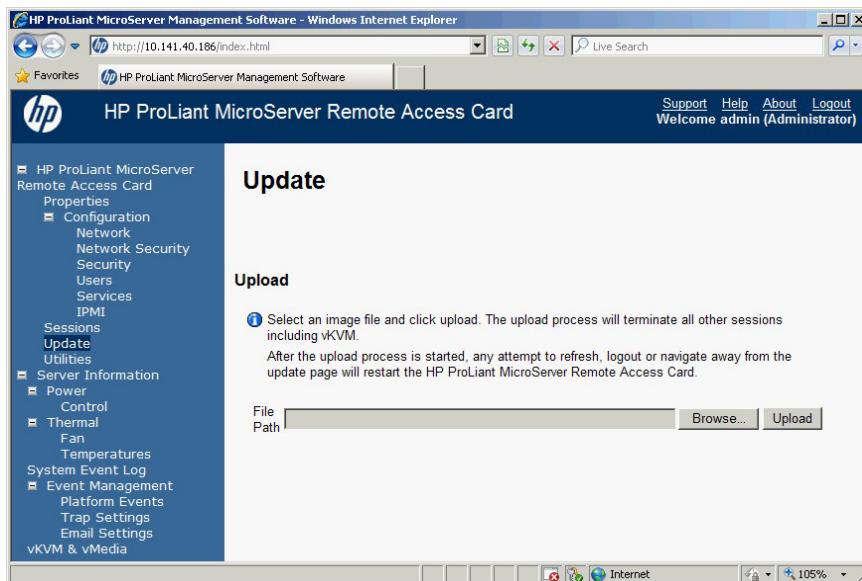


2. Click "Browse" button, select BMC firmware (Phrixus.bmc.xxxxxxx), and click "Open" button.

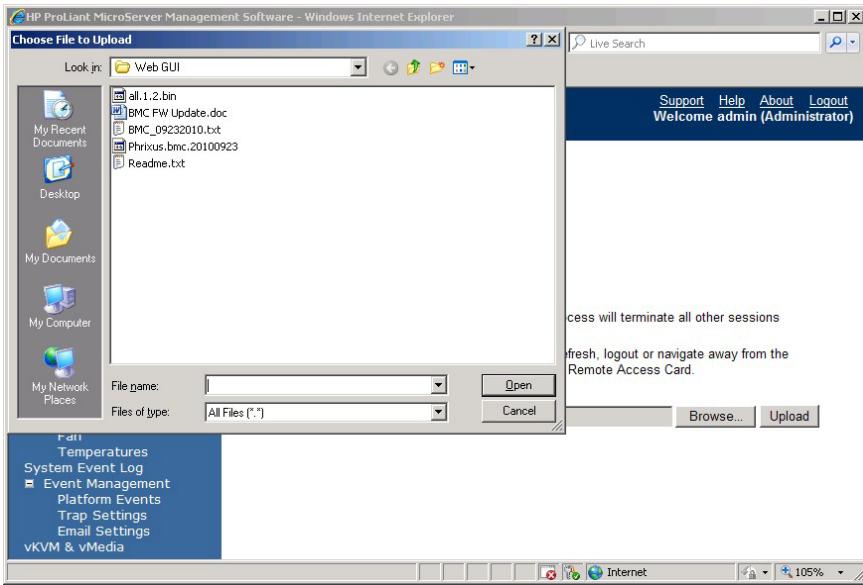


3. Then click "Upload" button then click "OK" to upload firmware

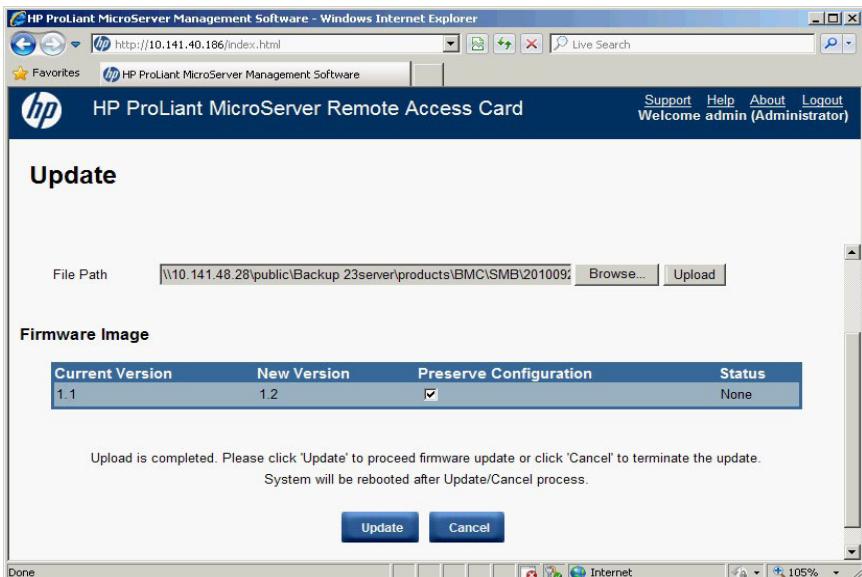


4. Update is running.

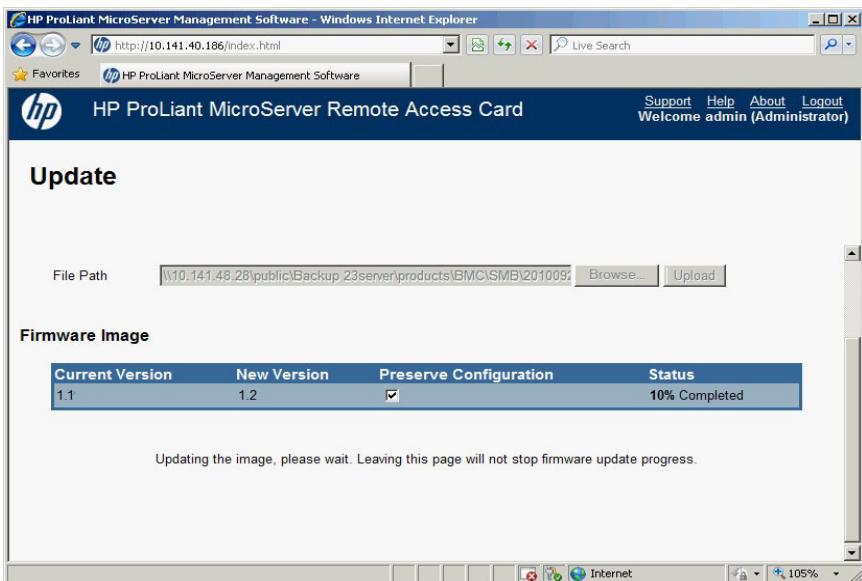

5. Update is finished.

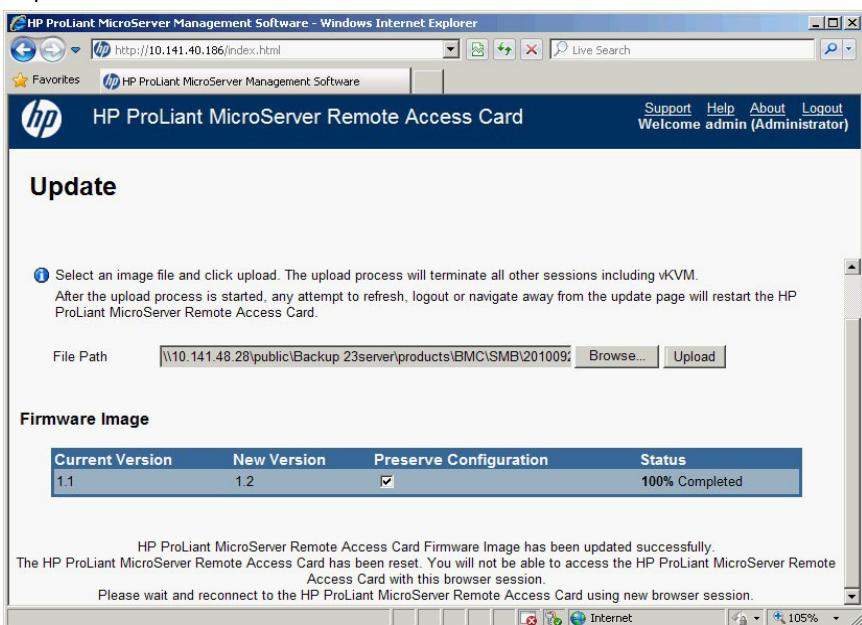

6. Connect the Web UI again to check the current BMC firmware version.

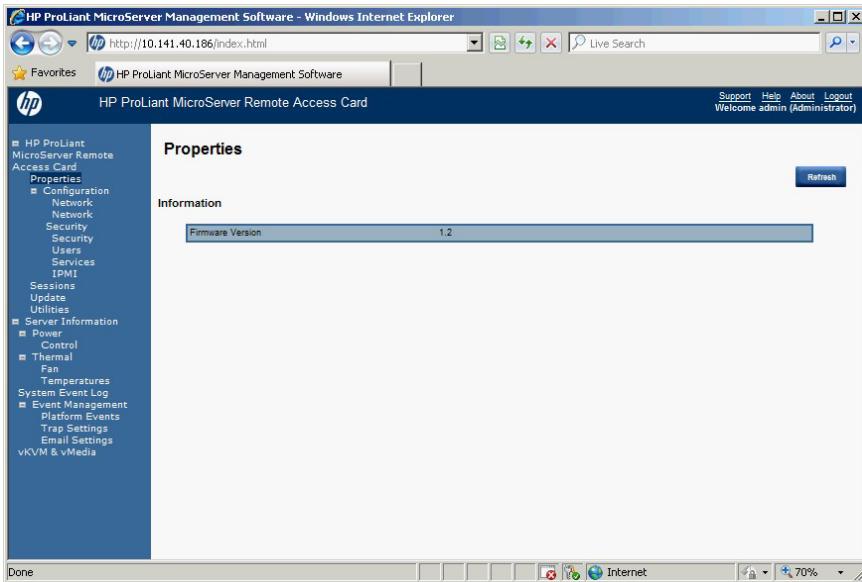

Update BMC Firmware under DOS mode

1. Prepare a bootable USB flash drive or hard drive
2. Copy the update.bat, socflash.exe, DOS4GW.EXE and the BMC firmware image (all.xxx.bin) to the USB flash drive or hard drive. Make sure they are in the same folder/directory.

```
Virtual KVM Session - 10.141.43.114
File View Macros Tools Help
C:\DOS>
C:\DOS>
C:\DOS>
C:\DOS>
C:\DOS>
C:\DOS>
C:\DOS>
C:\DOS>
C:\DOS>dir
Volume in drive C is FREEDOS
Volume Serial Number is Z322-16F0

Directory of C:\DOS

.
.
.
ALL11~1 BIN      13,246,464 07-02-10  5:05p
DOS4GW EXE        265,396 02-12-10  9:30a
README TXT         246 05-26-10 12:04p
SOCFLASH EXE      255,748 06-18-10 11:38a
UPDATE BAT        103 07-02-10  5:53p
5 file(s)       13,767,957 bytes
2 dir(s)        912,228,352 bytes free

C:\DOS>
```

3. Boot the system to DOS, and run update.bat under DOS.

```
Virtual KVM Session - 10.141.43.114
File View Macros Tools Help
C:\DOS>
C:\DOS>
C:\DOS>
C:\DOS>
C:\DOS>
C:\DOS>
C:\DOS>
C:\DOS>dir
Volume in drive C is FREEDOS
Volume Serial Number is 2322-16F0

Directory of C:\DOS

.              <DIR>  07-14-10  3:25p
..             <DIR>  07-14-10  3:25p
ALL11~1 BIN    13,246,464  07-02-10  5:05p
DOS4GW EXE     265,396   02-12-10  9:30a
README TXT      246   05-26-10 12:04p
SOCFLASH EXE    255,748   06-18-10 11:38a
UPDATE BAT     103   07-02-10  5:53p
5 file(s)     13,767,957 bytes
2 dir(s)      912,228,352 bytes free

C:\DOS>update.bat
```

4. Update is running....

```
Virtual KVM Session - 10.141.43.114
File View Macros Tools Help
C:\DOS>dir
Volume in drive C is FREEDOS
Volume Serial Number is 2322-16F0

Directory of C:\DOS

.              <DIR>  07-14-10  3:25p
..             <DIR>  07-14-10  3:25p
ALL11~1 BIN    13,246,464  07-02-10  5:05p
DOS4GW EXE     265,396   02-12-10  9:30a
README TXT      246   05-26-10 12:04p
SOCFLASH EXE    255,748   06-18-10 11:38a
UPDATE BAT     103   07-02-10  5:53p
5 file(s)     13,767,957 bytes
2 dir(s)      912,228,352 bytes free

C:\DOS>update.bat

C:\DOS>rem Phrixus iBMC FW Update Utility           Rev 1.0

C:\DOS>socflash if=ALL11~1.bin gpio_b=c40 gpio_f=c41
DOS/4GW Protected Mode Run-time Version 1.97
Copyright (c) Rational Systems, Inc. 1990-1994
ASPEED SOC Flash Utility v.1.03.02
```

5. Update is finished.

```

Virtual KVM Session - 10.141.43.114
File View Macros Tools Help
5 file(s)      13,767,957 bytes
2 dir(s)      912,228,352 bytes free

C:\NDOS>update.bat

C:\NDOS>rem Phrixus iBMC FW Update Utility           Rev 1.0

C:\NDOS>socflash if=all111~1.bin gpio_b=c40 gpio_f=c41
DOS/4GW Protected Mode Run-time Version 1.97
Copyright (c) Rational Systems, Inc. 1990-1994
ASPEED SOC Flash Utility v.1.03.02
Static Memory Controller Information:
CS0 Flash Type is SPI
CS1 Flash Type is NOR
CS2 Flash Type is SPI
Boot CS is 2
Option Information:
CS: 2
Flash Type: SPI
[SOCLFLASH] Flash ID : 1701
Find Flash Chip #1: SpansionS25FL128P
Update Flash Chip #1 O.K.
Update Flash Chip O.K.


C:\NDOS>_

```

6. Connect the Web UI to check the current BMC firmware version.

Update Firmware under Windows

1. Copy the "socflash.exe", "update.bat", the BMC firmware image (all.xxx.bin) and corresponding driver(x86 and x64) into the same directory under Windows.

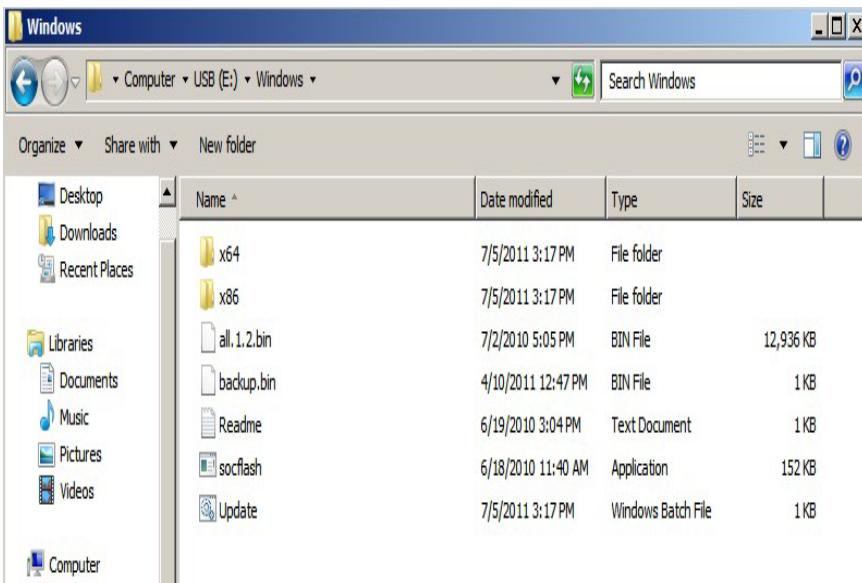


2. Click update.bat to update firmware.

```
E:\Windows>update
E:\Windows>rem Phrixus iBMC FW Update Utility           Rev 1.0
E:\Windows>socflash of=backup.bin offset=0x24000 backupcount=0x10 gpio_b=c40 gpio_f=c41
ASPEED SOC Flash Utility v.1.03.02
Found ASPEED Device 1a03:2000 rev. 10
Static Memory Controller Information:
CS0 Flash Type is SPI
CS1 Flash Type is NOR
CS2 Flash Type is SPI
Boot CS is 2
Option Information:
CS: 2
Flash Type: SPI
[SOFLASH] Flash ID : 1701
Find Flash Chip #: SpansionS25FL128P
Backup Flash Chip O.K.


E:\Windows>socflash if=all.1.2.bin gpio_b=c40 gpio_f=c41
ASPEED SOC Flash Utility v.1.03.02
Found ASPEED Device 1a03:2000 rev. 10
Static Memory Controller Information:
CS0 Flash Type is NOR
CS1 Flash Type is NAND
CS2 Flash Type is SPI
Boot CS is 2
Option Information:
CS: 2
Flash Type: SPI
[SOFLASH] Flash ID : 1701
Find Flash Chip #: SpansionS25FL128P
Write Flash Chip #1 at: c0000
```

3. Connect the Web UI to check the current BMC firmware version.

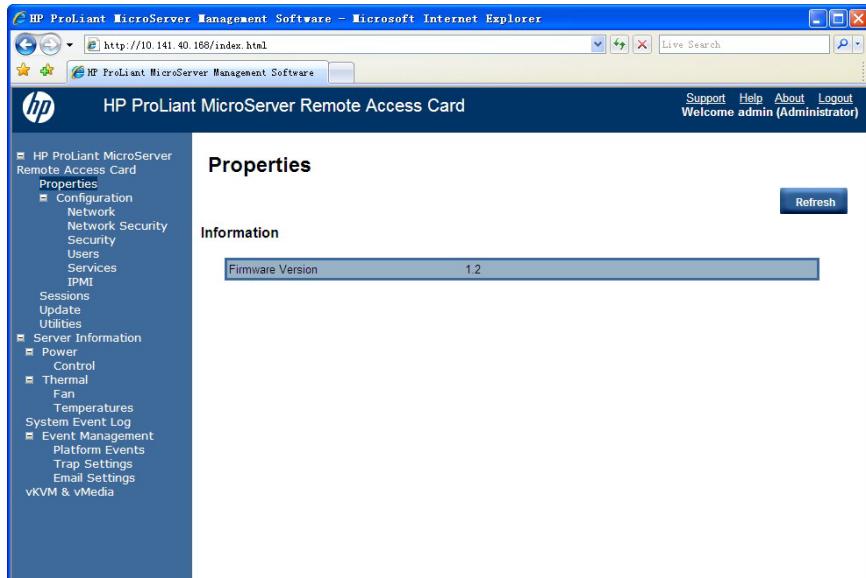


Update Firmware under Linux


1. Copy the BMC firmware image (all.xxx.bin) and all files in "Linux" folder (socflash/Linux) into the same directory under Linux

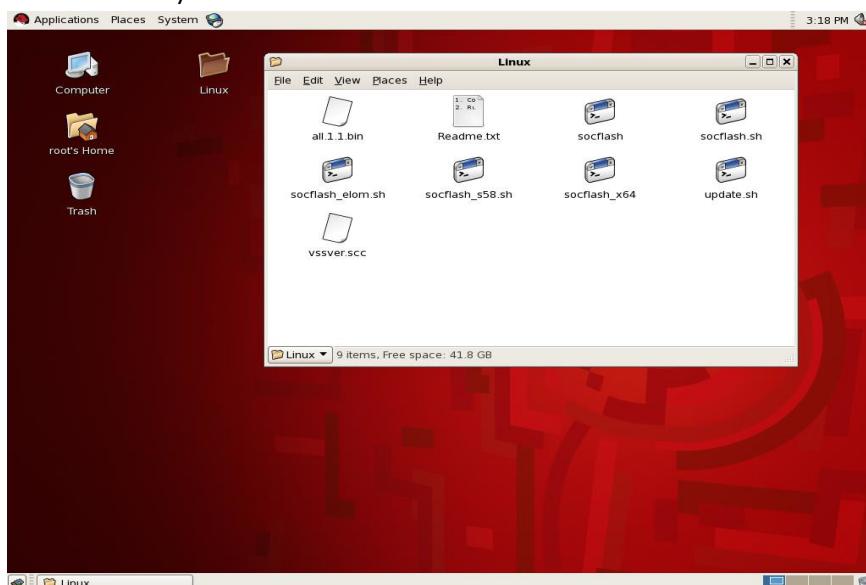


2. Click "update.bat" under Linux and then click "Run in Terminal"

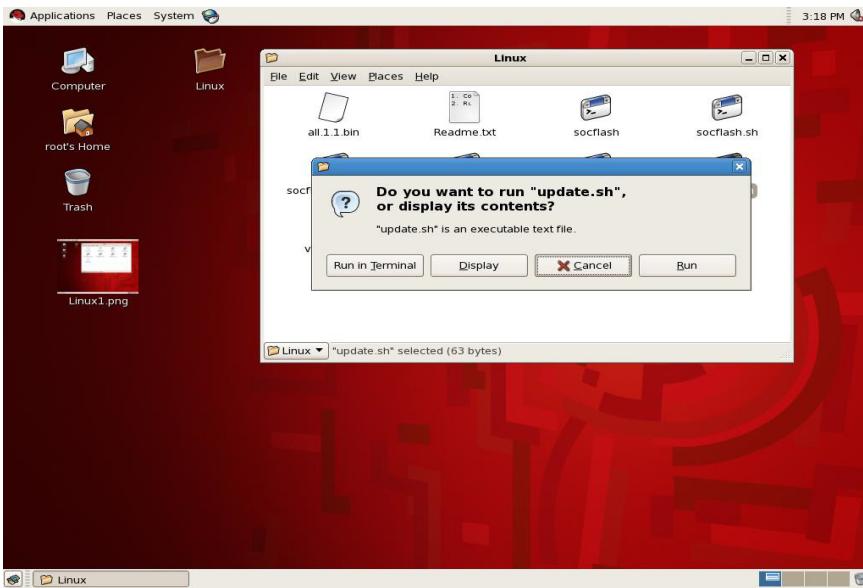

3. Update is running.....

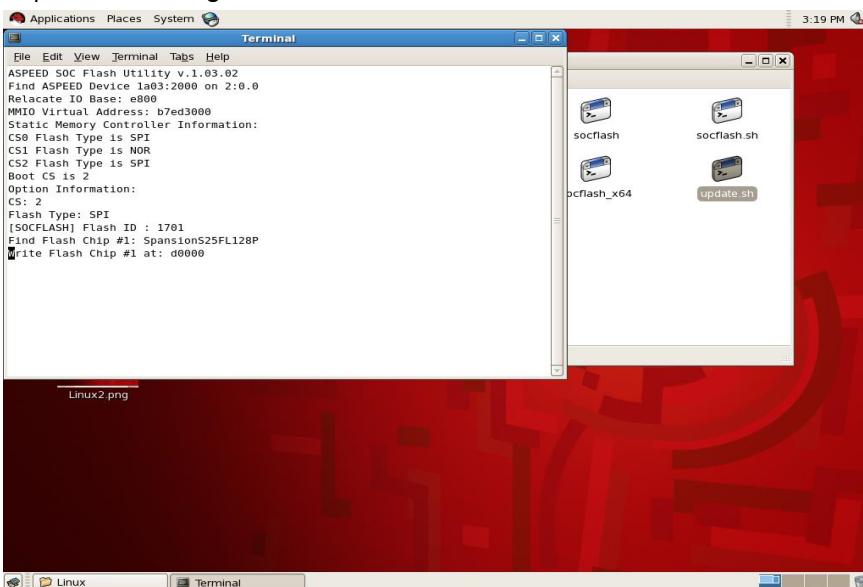

4. Connect the Web UI to check the current BMC firmware version.

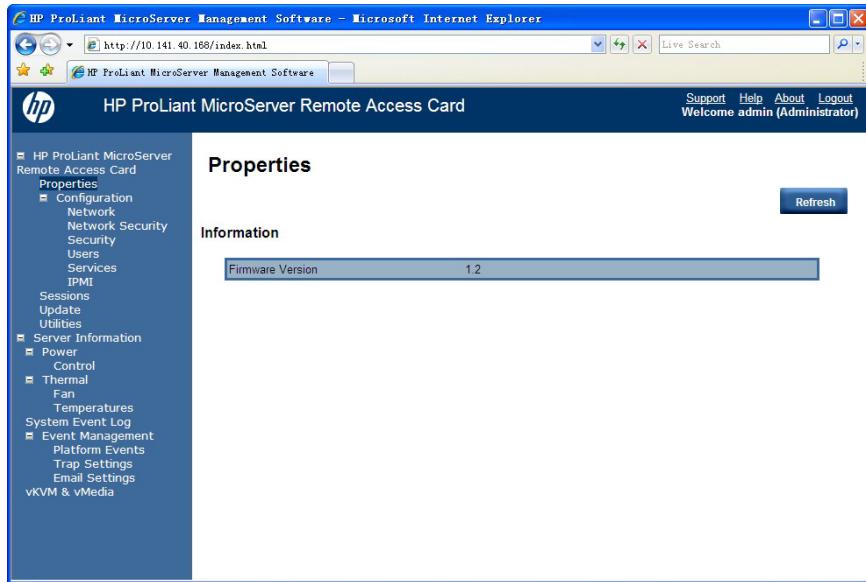

User account and access

The Server supports three accounts types: User, Administrator and Operator. Different account types have different levels of permissions to view and control features. Administrator User Account is a user privilege that allows you to add, modify, and delete local BMC user accounts. It also allows you to alter privileges for all users, including granting all permissions to yourself. Without this privilege, you can only view your own settings and changes your own password.

The default privilege of the account is administrator, so we recommend changing the default settings after logging in to BMC for the first time from security viewpoint.

The default user name and password:

- User name—admin
- Password—password

For more information on how to change a user, please refer to configuration chapter about changing user settings through a web browser.

Encryption

BMC provides enhanced security for remote management in distributed IT environments. Web browser data is protected by SSL encryption. SSL encryption of HTTP data ensures that the data is secure as it is transmitted across the network.

For more information about the BMC firmware supported optional encryption methods, please see description on chapter "BMC Overview".

Using Remote Access Card

Using BMC Web UI

Browser main menu options

Using a web browser, you can access all of the links to do remote control

Title	Item	Options	Description
HP ProLiant MicroServer Remote Access Card	Properties	/	Get current firmware version of Remote Access Card
	Configuration	Network	Enable to view and modify network settings for BMC
		Network Security	Include four fields to allow view or set the network security values
		Security	Enable to create a certificate request and import a certificate to support SSL connections.
		Users	Displays all user information and add a new user
		Services	Web Server configuration
		IPMI	IPMI Over LAN setting
	Sessions	/	View or kill active sessions
	Update	/	Update firmware version of Remote Access Card
	Utilities	/	Provide utility on web browser to reboot Remote Access Card and load factory default value
Server Information	Power	Control	Accesses system power to perform power control operation
	Thermal	Fan	Provide the monitoring of the fan status
		Temperature	Provide the monitoring of the Temperature sensor status
	System Event Log	/	Provide the system event log
	Event Management	Platform Events	provides a mechanism for configuring the BMC to taking selected actions on event

			messages that it receives
		Trap Settings	Enables you to specify destination addresses, and enable/disable SNMP alerts
		Email Settings	Allows to enable email alert and specify email address to receive alert message
	Virtual KVM & Virtual Media	/	Accesses virtual media or the remote graphic console

Properties

This section provides current Firmware Version.

Configuration

The drop-down list of configuration page consists of six different categories: Network, Network Security, Security, Users, Services and IPMI. You can click help link on each page to get the purpose of every field

Network

The Network Settings enable you to view and modify network settings for BMC. Only users with Administrator or Operator privilege level can change these settings. Users that do not have these privileges can view the assigned settings.

Network Settings

The Network page displays the NIC setting, Common settings about DNS, IPV4/IPV6 settings and VLAN setting. From the Network screen, you can configure network environment for servers by IPV4 setting or IPV6 settings. All users can view the network settings, but only users with the settings privilege can change these settings. To access network page, click configuration->network. The network page appears with the following five tabs information and settings:

Network Interface Card Settings

The screenshot shows the 'Network' section of the management interface. On the left, a sidebar lists various server management categories. The main area is titled 'Network Interface Card Settings'. It contains two main sections: 'NIC Selection' and 'Common Settings'. Under 'NIC Selection', there are fields for MAC Address (98-4B-E1-08-9F-43), Auto Negotiation (On selected), Network Speed (100 Mb), and Duplex Mode (Full selected). Under 'Common Settings', there are fields for Enable Dynamic DNS (unchecked), Host Name (MergePoint-EMS), and Use DHCP for DNS Domain Name (unchecked).

- NIC Selection enables to select which LAN port to use. The default value is “dedicated”.
- MAC Address identifies this unique device on the network
- Auto Negotiation toggles on/off the auto negotiation of the connection speed and duplex mode. This is only applies if it is in dedicated NIC mode.
- Network Speed enables to set the network speed to 10Mb or 100Mb to match your network settings.
- Duplex Mode enables you to set the duplex mode to full or half to match your network settings.
- Common Settings
- Enable Dynamic DNS allows registering the ProLiant MicroServer address with the DNS when enabled.
- Host Name-- when registering the ProLiant Micro Server with the DNS. The character set is a-z, A-Z, 0~9, underscore (_) and dash (-), using between 0 and 64 characters and no white space, if unspecified, the default name is MergePoint-EMS.
- Use DHCP to obtain DNS Domain Name can be used to enable or disable the DHCP to acquire the DNS Domain name.

IPV4 Settings

The screenshot shows the 'Network' configuration page for the 'HP ProLiant MicroServer Remote Access Card'. The left sidebar lists various management options under 'HP ProLiant MicroServer Remote Access Card Properties'. The main panel is titled 'IPv4 Settings' and contains the following fields:

Enabled	<input checked="" type="checkbox"/>
Use DHCP	<input checked="" type="checkbox"/>
IP Address	10.141.40.168
Subnet Mask	255.255.255.0
Gateway	10.141.40.1
Use DHCP to obtain DNS server addresses	<input type="checkbox"/>
Preferred DNS Server	0.0.0.0
Alternate DNS Server	0.0.0.0

Below this is a section for 'IPv6 Settings' with the following fields:

Enabled	<input type="checkbox"/>
Auto Configuration	<input checked="" type="checkbox"/>

- Use DHCP: DHCP Server is the IP address of the DHCP server. This field cannot be assigned. It is received from DHCP if DHCP is enabled.
- Subnet Mask: Use the subnet mask parameter to identify the subnet mask for the IPMI Port.
- IP Address is the BMC IP address. Use this parameter to assign a static IP address to BMC on your network. By default, the IP address is assigned by DHCP
- Gateway displays the IP address of the network gateway. If DHCP is in use, the Gateway is automatically supplied. If not, enter the network gateway address.

IPV6 Settings

The screenshot shows the 'Network' configuration page for the 'HP ProLiant MicroServer Remote Access Card'. The left sidebar lists various management options under 'HP ProLiant MicroServer Remote Access Card Properties'. The main panel is titled 'IPv6 Settings' and contains the following fields:

Enabled	<input type="checkbox"/>
Auto Configuration	<input checked="" type="checkbox"/>
IP Address 1	[empty]
Prefix Length	64
IP Gateway	[empty]
Link Local Address	[empty]
IP Address 2	[empty]
Use DHCP to obtain DNS server addresses	<input type="checkbox"/>
Preferred DNS Server	[empty]
Alternate DNS Server	[empty]

Below this is a section for 'VLAN Settings' with the following field:

Enable VLAN ID	<input type="checkbox"/>
----------------	--------------------------

The following options are available to configure IPv6 environment

- Auto Configuration: Lets the server administrator to obtain the IPV6 address from the DHCP server

- IP Address 1: The information will be appeared if checked auto-configuration. When auto-configuration is disabled, the IP address needs to be entered by manually.
- IP Gateway: Specifies the gateway for the ProLiant MicroServer NIC. To change this setting, you must first uncheck the auto configuration checkbox.
- Link Local Address: Specifies the IPv6 address for the ProLiant MicroServer NIC
- IP Address 2: Specifies the additional IPv6 address for the ProLiant MicroServer NIC if one is available.
- Use DHCP to obtain DNS Server address: Obtain the DNS server name (such as www.hp.com) from DHCP IPv6 Sever when DHCP and DNS of the server are configured properly.
- Preferred DNS Sever: Manually configures the IP address of the preferred DNS server. To change this setting, you must first disable the option that uses DHCP to obtain DNS Sever address.
- Alternate DNS Sever: Manually configures the IP address of the alternate DNS server. To change this setting, you must first disable the option that uses DHCP to obtain DNS Sever address.


VLAN setting

Configuration options have been added to support IEEE 802.1q VLAN (virtual LAN) headers for IPMI over IP sessions on IEEE 802.3 Ethernet. VLAN works with VLAN-aware routers and switches to allow a physical network to be partitioned into ‘virtual’ networks where a group of devices on different physical LAN segments which can communicate with each other as if they were all on the same physical LAN segment. This can be used to isolate classes of network membership at the Ethernet Packet level rather than at the IP level, as might be done with a router. This can be used to set up a ‘management VLAN’ where only devices that are members of that VLAN will receive packets related to management, and, conversely, will be isolated from the need to process network traffic for other VLANs.

Enable VLAN ID: If enabled, only matched virtual LAN (VLAN) ID traffic will be accepted.

VLAN ID: VLAN ID field of 802.1g fields. Enter a valid value for VLAN ID (must be a number from 1 to 4094).

Priority: Priority field of 802.1g fields. Enter a number from 0 to 7 to set the priority of the VLAN ID.

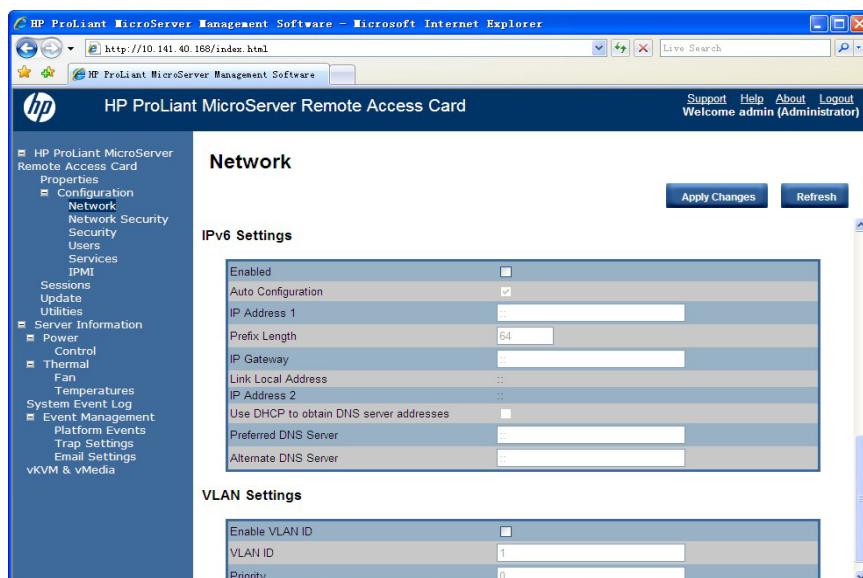

Network Security

This page includes four fields for network security values. If you have the Administrator or Operator privilege level, you can modify the values and click the apply changes button to execute the change. The new values are available to the firewall immediately, but may not be utilized until the next security event occurs.

- IP Blocking enabled: Enables/disables the IP address blocking feature, which limits the number of failed login attempts from specific IP address for a pre-selected time span.
- IP Blocking Fail Count: Sets the number of login failures attempted from an IP address before the login attempts are rejected. The range is 2 to 16.
- IP Blocking Fail Window: Determines the time span (in seconds) that IP Blocking Fail Count failure must occur to trigger the IP Blocking Penalty Time. The range is 10 to 65535 seconds.
- IP Blocking Penalty Time: Set the time span (in seconds) that login attempts from an IP address with excessive failures are rejected. The range is 10 to 65535 seconds.

The screenshot shows a Microsoft Internet Explorer window titled "HP ProLiant MicroServer Management Software - Microsoft Internet Explorer". The URL in the address bar is "http://10.141.40.168/index.html". The main content area is titled "Network Security" and contains the following text: "Use this page to configure the network security settings." Below this, there are four input fields:

IP Blocking Enabled	<input type="checkbox"/>	
IP Blocking Fail Count	5	
IP Blocking Fail Window	60	Seconds
IP Blocking Penalty Time	300	Seconds


On the left side, there is a navigation menu with the following items:

- HP ProLiant MicroServer Remote Access Card Properties
 - Configuration
 - Network
 - Network Security**
 - Security
 - Users
 - Services
 - IPMI
- Sessions
- Update
- Utilities
- Server Information
 - Power
 - Control
 - Thermal
 - Fan
 - Temperatures
- System Event Log
- Event Management
 - Platform Events
 - Trap Settings
 - Email Settings


Security

Below is how to update certificate by WEB-GUI.


1. On the main menu navigation bar, click configuration -> Security.
2. Click "Generate Certificate" button to generate Certificate request file (CSR file).

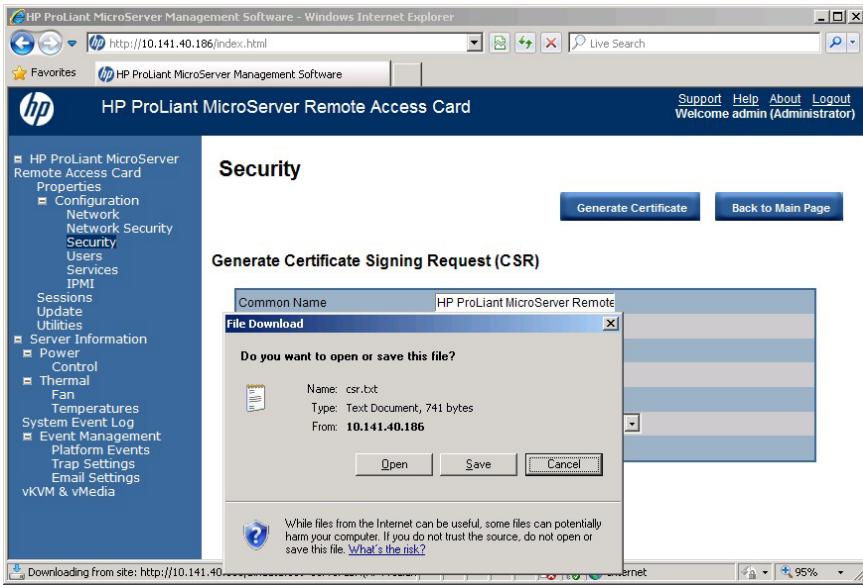


3. On the open dialog window, click “save” button to save file on your local system
4. Open the file csr.txt and copy the request number.
5. Build the CSR with Microsoft Certificate service or other OpenSSL tools to generate the certificate.

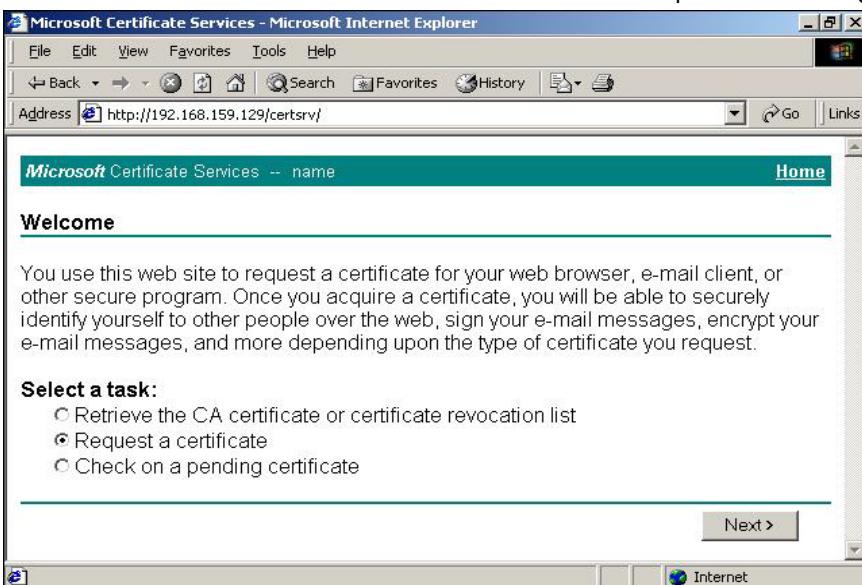


6. Choose advanced certificate request.

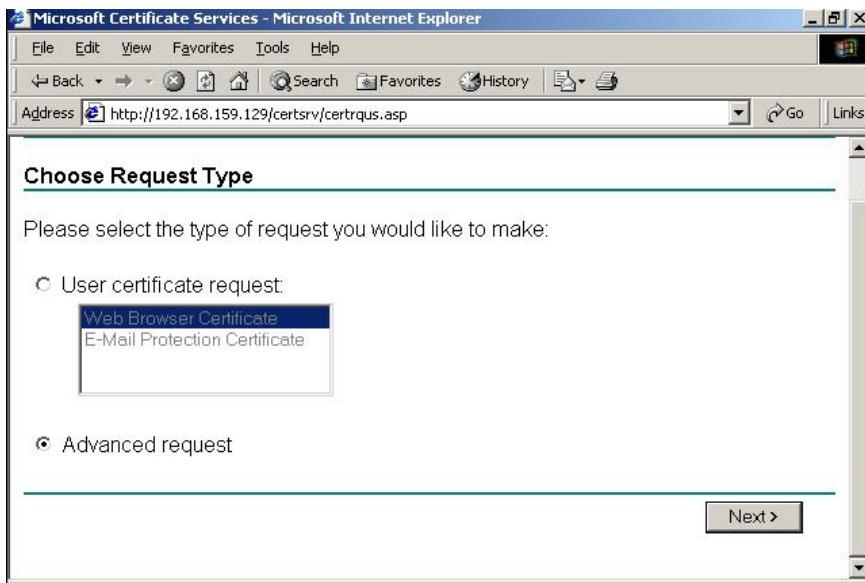


7. Submit a certificate request by using a base-64-encoded CMC or PKCS #10 file, or submit a renewal request by using a base-64-encoded PKCS #7 file.

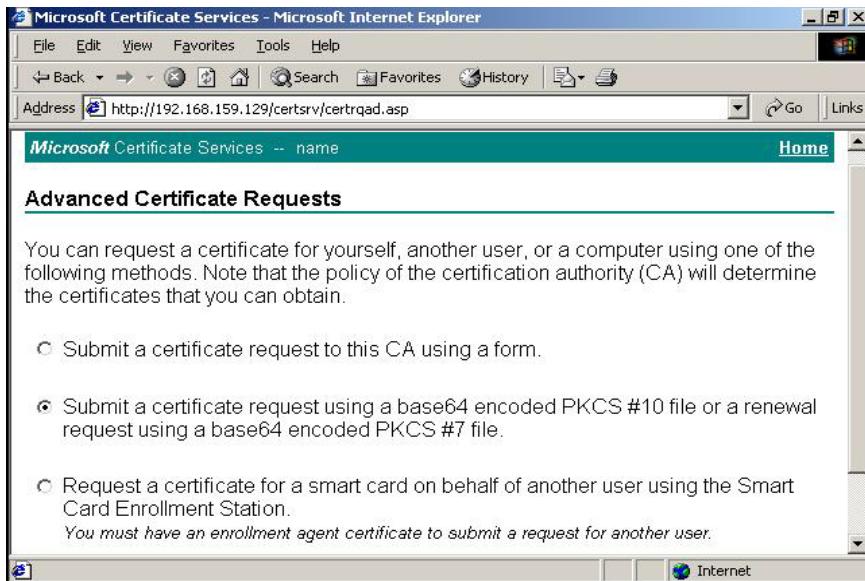


8. Copy the text from cert.txt and paste in to the form, then click "Submit" button.

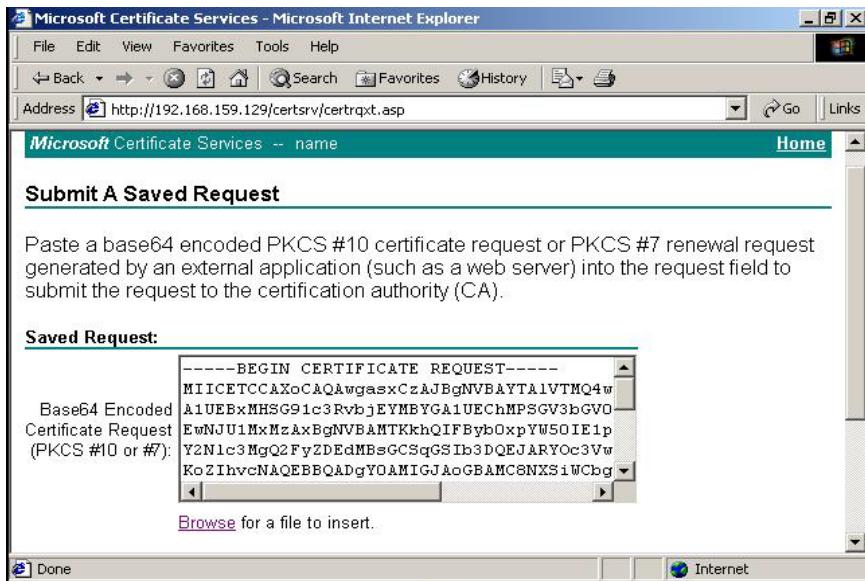


9. The certificate will be pending.

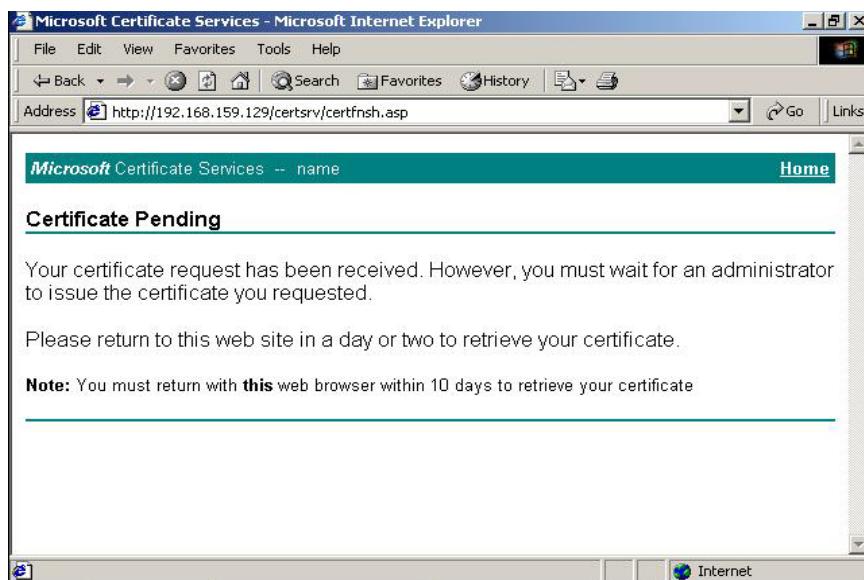

10. Open "Certification Authority" by clicking start->Programs->Administrative Tools->Certification Authority, the certificate you requested will be displayed in Issued Certificate item

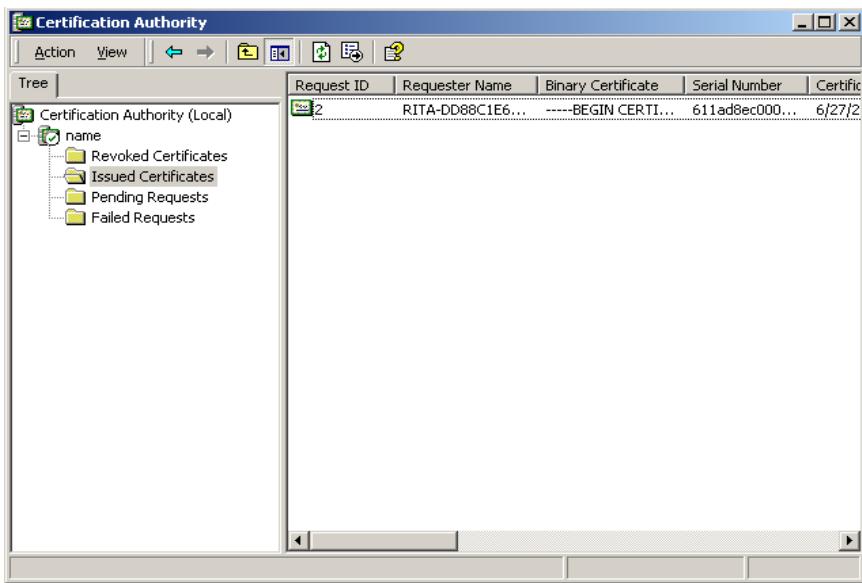

11. Open the requested certificate and select Details tab, then click "Copy to File" button.

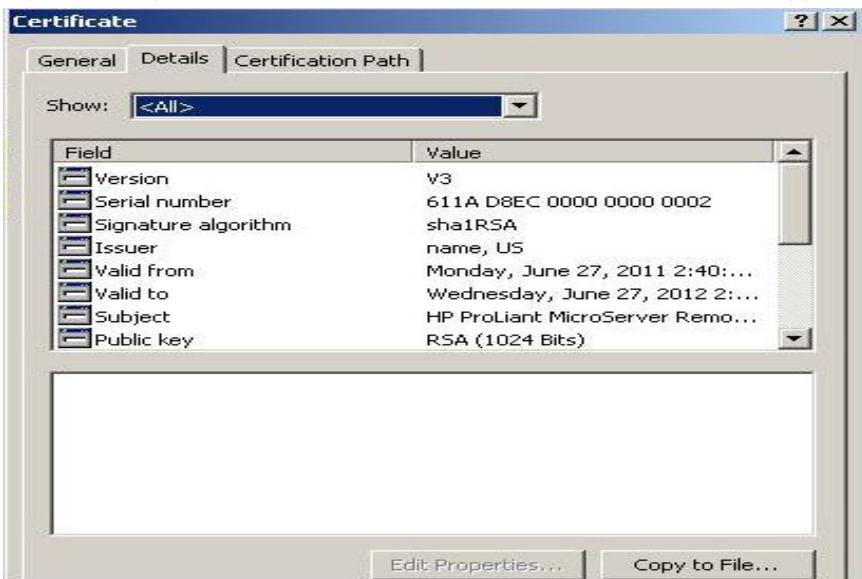

12. Select the format as "Base-64 encoded X.509(.CER)" and click next.



13. Specify the path and the file name, and then click next button.



14. Click "Finish" button, the certificate has been exported successfully.



15. Upload certificate to BMC

16. Click "Upload Server Certificate" button to upload certificate

Users

This page displays all user information and configuration. With Administrator privilege level, you can click any User ID number in the Users list to add a user or change the settings, then click Refresh button to refresh the User list

User ID	State	User Name	User Role	IPMI LAN Privilege
1	Disabled		None	None
2	Enabled	admin	Administrator	Administrator
3	Disabled		None	Administrator
4	Disabled		None	None
5	Disabled		None	None
6	Disabled		None	None
7	Disabled		None	None
8	Disabled		None	None
9	Disabled		None	None
10	Disabled		None	None
11	Disabled		None	None
12	Disabled		None	None
13	Disabled		None	None

To add a user:

1. On the main menu navigation bar, click configuration -> Users.
2. Click any user ID number in the user ID column,

3. Select enable user, and enter the user name in the user name field
4. Enter password in the new password and confirm new password fields
5. Select User Role and IPMI LAN Privilege from the list
6. Click Apply Changes to take effect

Services

This page allows you to view the services parameters. With Administrator or Operator privilege level, you can specify the Web GUI's attributes. Click the "Apply Changes" button to execute the changes and restart the Web GUI server.

The screenshot shows the 'HP ProLiant MicroServer Management Software - Microsoft Internet Explorer' interface. The title bar reads 'HP ProLiant MicroServer Management Software - Microsoft Internet Explorer' and the address bar shows 'http://10.141.40.168/index.html'. The main content area is titled 'HP ProLiant MicroServer Remote Access Card' and 'Services'. On the left, there's a sidebar with various management options. The main panel shows 'Web Server' settings:


HTTP Port Number	80
HTTPS Port Number	443
Timeout	1800 seconds
Max Sessions	5
Active Sessions	1

A blue 'Apply Changes' button is located at the top right of the configuration area.

- HTTP Port (Decimal number only) used by the embedded software that listens for a server connection. The default value is 80.
- HTTPS Port (Decimal number only) used by the embedded software that listens for a secure server connection. The default value is 443.
- Timeout is the time that a connection is allowed to remain idle (60 to 10800 seconds). The session is canceled when the time-out is reached.
- Max Sessions is the maximum number of simultaneous sessions allowed for this system.
- Active Sessions is the number of current sessions on the system, less than or equal to the setting for Max Sessions.

IPMI

This page allows you to view the IPMI values. With Administrator or Operator privilege level, you can modify the IPMI Serial attributes and IPMI LAN Settings values and then click *Apply Changes* to execute validation against the Encryption key field and send all data to the server.

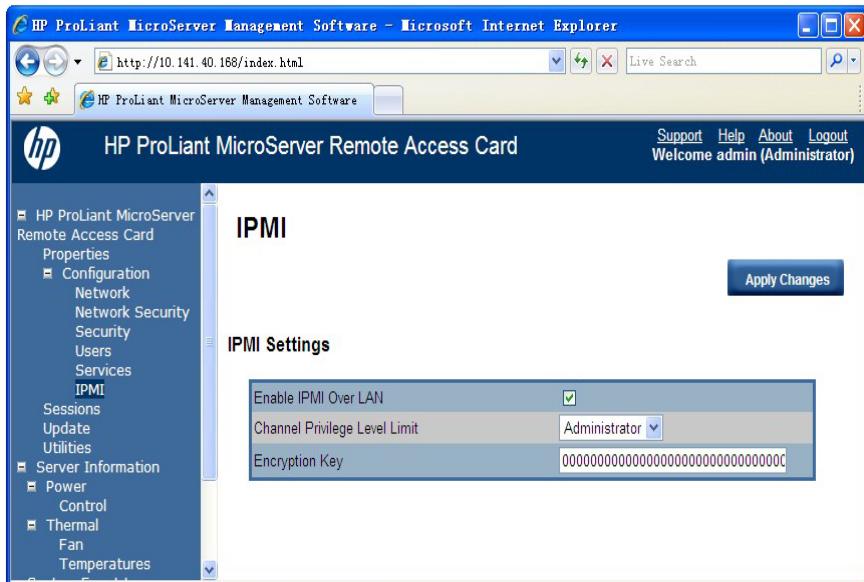

- Enable “IPMI Over LAN” by checking the box. Disable “IPMI Over LAN” by un-checking the box.
- Channel Privilege Level Limit is the maximum privilege level that can be accepted on the LAN channel (Administrator, Operator or User).
- Encryption Key allows from 0 to 20 two-digit Hex characters and no spaces.

Sessions

Use this page to view information about the active sessions. Additionally, privileged users can click on the trash can icon to kill an active session.

Update

Preparation before online firmware flashing

1. Remote Access Card correctly installed in the connectors on the system board
2. Download the latest firmware version from website and save it on your local system.
3. The remote system needs to connect with network.

Start to update firmware of Remote Access Card

Following procedures are used to update firmware


1. Accessing the firmware page from a web browser
2. On the main menu navigation bar, click Update
3. Click Browse to enter the path where the firmware image file resides.

4. Click the Upload button. If the file is valid, all other sessions will be terminated and the image upload will begin. If the upload fails, a message will notify you to upload another file. For a successful upload, the current firmware version and the version of the new file will be displayed, as well as the Preserve Configuration checkbox, Update button and Cancel button.
5. Click the Update button to begin the firmware update process and view the update status. When the update is completed, the embedded software will reboot automatically. If you click the Cancel button, the process will be terminated and the embedded software will reboot.

Utilities

Reboot: Click 'Reboot' button to reboot the System.

Factory Default: Click 'Factory Default' button to reset System to default.

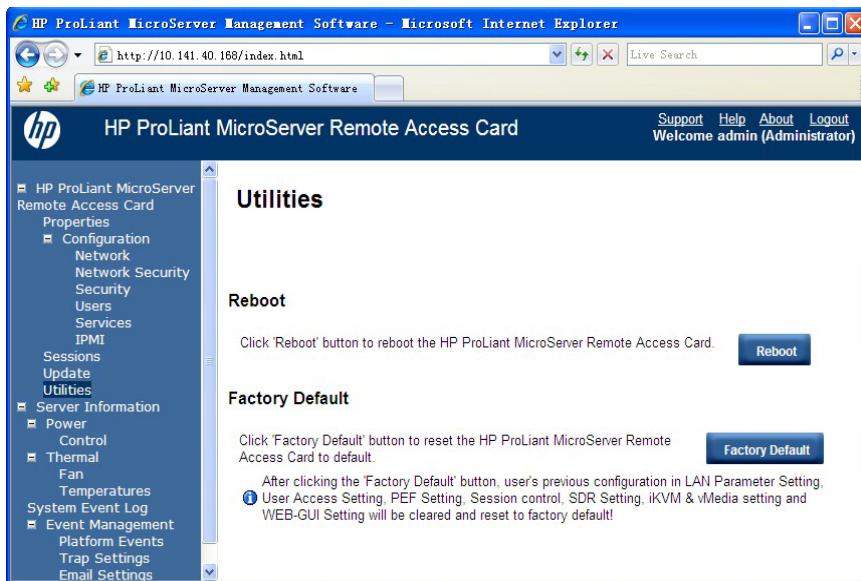

Power/Control

On the main menu navigation bar, click power, the Power control screen displays current power status.

To modify power control, select the operation you wish and click Apply Changes.

Thermal

The Server provide the monitoring of the current major sensors status, including system temperature and system fan. You can view the data for this feature on the Thermal Page through a web browser or through the BIOS Setup Utility.

Viewing sensor data from a web browser

To access this page from a web browser, on the main menu navigation bar, click Thermal.


The thermal screen displays a snapshot of the temperature, fans sensor data, including sensor reading, warning threshold, failure threshold.

Status	Probe Name	Reading	Warning Threshold	Failure Threshold
Green Checkmark	CPU_THERMAL	43.0 C	105.0C	110.0C
Green Checkmark	NB_THERMAL	43.0 C	100.0C	105.0C
Green Checkmark	AMBIENT_THERMAL	28.0 C	40.0C	45.0C


Viewing sensors data from Rom-Based setup utility

1. Press the F10 key during POST to enter the BIOS Setup Utility.
2. Press the right arrow (→) key to navigate to the "Advanced" menu.

3. Press the down arrow (↓) key to scroll to "IPMI Configuration". Press the Enter key.
4. Press the down arrow (↓) key to scroll to "System Temperature Configuration". Press the Enter key.
The system temperature sensors will be displayed.

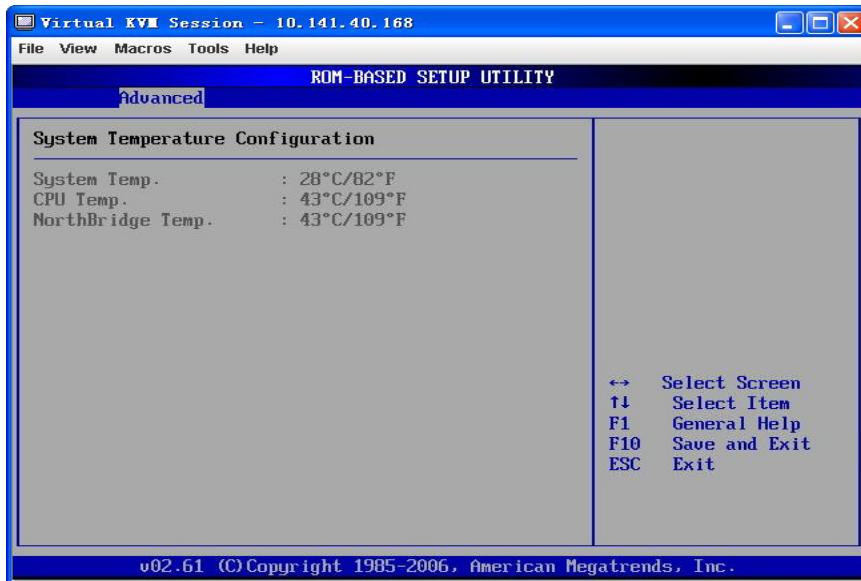

5. Press ESC key to exit, and the down arrow (↓) key to scroll to "System Fan Health Information".

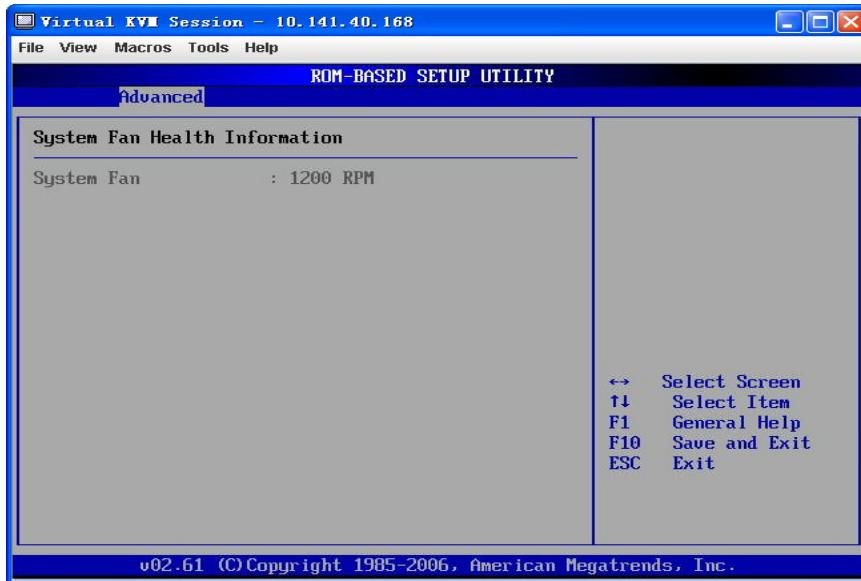

System Event Log

The BMC provides the interface to the System Event Log (SEL) for the system. And provide to capture and stores the IPMI event log for access through a browser, CLP, BIOS Setup Utility. The system event log displays a short description of each system event. Recorded events include abnormal temperature, fan events, system power loss etc.

Severity	Date/Time	Description
Green	2011-06-24 10:18:45	Sys Pwr Monitor: Power Unit sensor, Power Off / Power Down was deasserted
Yellow	2011-06-24 10:18:40	Sys Fwr Monitor: Power Unit sensor, Power Off / Power Down was asserted
Green	2010-07-03 01:16:37	Sys Pwr Monitor: Power Unit sensor, Power Off / Power Down was deasserted
Yellow	2010-07-03 01:15:52	Sys Fwr Monitor: Power Unit sensor, Power Off / Power Down was asserted
Yellow	2011-06-11 16:16:42	Sys Pwr Monitor: Power Unit sensor, Power Off / Power Down was asserted
Yellow	2011-06-10 17:54:59	Sys Fwr Monitor: Power Unit sensor, Power Off / Power Down was asserted
Yellow	2011-06-09 20:51:05	Sys Pwr Monitor: Power Unit sensor, Power Off / Power Down was asserted
Green	2011-06-09 19:09:17	Sys Pwr Monitor: Power Unit sensor, Power Off / Power Down was deasserted
Yellow	2011-06-09 19:09:16	Sys Fwr Monitor: Power Unit sensor, Power Off / Power Down was asserted
Green	2011-06-09 19:07:26	Sys Pwr Monitor: Power Unit sensor, Power Off / Power Down was deasserted
Yellow	2011-06-09 19:07:25	Sys Fwr Monitor: Power Unit sensor, Power Off / Power Down was asserted
Green	2011-06-09 18:56:46	Sys Pwr Monitor: Power Unit sensor, Power Off / Power Down was deasserted


Accessing the system event log from a web browser

To access this page from a web browser, on the main menu navigation bar, click system event log.

The system event log screen displays a snapshot of each system event, including the date/ time of the event occurred, severity of each event and brief description.

Accessing the SEL from BIOS SETUP UTILITY

1. Press the F10 key during POST to enter the BIOS Setup Utility.
2. Press the right arrow (→) key to navigate to the "advanced" menu.
3. Press the down arrow (↓) key to scroll to "IPMI Configuration". Press the Enter key.
4. Press the down arrow (↓) key to scroll to "System Temperature Configuration". Press the Enter key.
5. Press the arrow (↓) key to scroll to following available options:
 - View BMC System Event Log
 - Clear BMC System Event Log

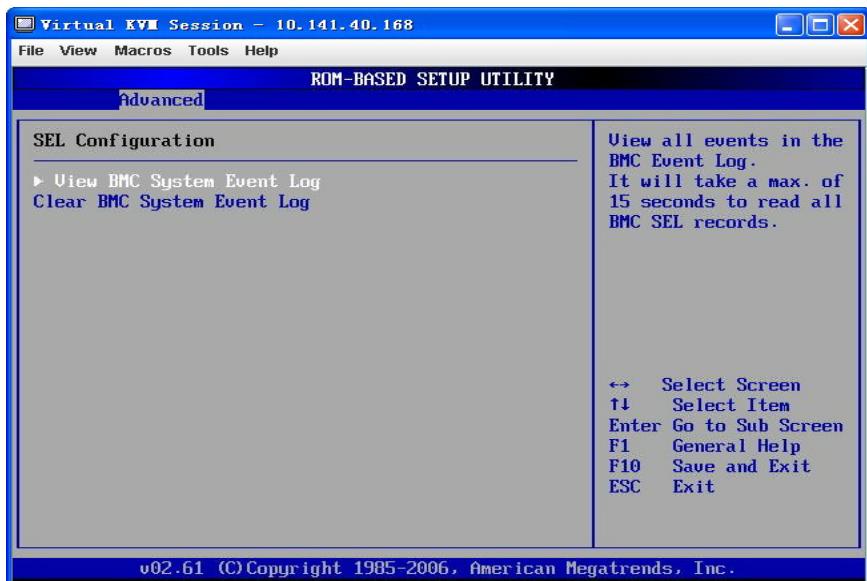

Event Management

Platform Events

Platform Event Filtering (PEF) provides a mechanism for configuring the BMC to take selected actions on event messages that it receives. These actions include operations such as reboot, Power Cycle, Power off, as well as triggering the generation of an alert. The event messages can be selected are Fan Critical Assert, Temperature Critical assert and Temperature Warning Assert Filter.

Filter Name	None	Reboot	Power Cycle	Power Off	Generate PET
Fan Critical Assert Filter	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="checkbox"/>
Temperature Critical Assert Filter	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="checkbox"/>
Temperature Warning Assert Filter	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="checkbox"/>

To configure an action, select the desired action on desired event. For example:

Select Power off on fan critical assert filter, and click changes.

Remove one fan from board, system will power off after waiting for 60 seconds

You can get a PEF email alerts by checking Global Alerting Enable.

Trap Settings

The trap setting configuration screen enables you to specify destination addresses, and enable/disable SNMP alerts, the event traps can issue an alert if an authentication failure occurs.

IPv4 Destination	Enable	IPv4 Address	Send Test Trap
IPv4 Destination 1	<input type="checkbox"/>	0.0.0	<input type="button" value="Send Test Trap"/>
IPv4 Destination 2	<input type="checkbox"/>	0.0.0	<input type="button" value="Send Test Trap"/>
IPv4 Destination 3	<input type="checkbox"/>	0.0.0	<input type="button" value="Send Test Trap"/>
IPv4 Destination 4	<input type="checkbox"/>	0.0.0	<input type="button" value="Send Test Trap"/>

IPv6 Destination	Enable	IPv6 Address	Send Test Trap
IPv6 Destination 1	<input type="checkbox"/>	::	<input type="button" value="Send Test Trap"/>
IPv6 Destination 2	<input type="checkbox"/>	::	<input type="button" value="Send Test Trap"/>
IPv6 Destination 3	<input type="checkbox"/>	::	<input type="button" value="Send Test Trap"/>
IPv6 Destination 4	<input type="checkbox"/>	::	<input type="button" value="Send Test Trap"/>

Community String
Community Name: public

- Enable-- Enables or disables IPv4/IPv6 destination addresses
- IPv4 Destination—Specifies where to send the PET trap from the destinations your defined Note IPV4 address only support numerical values between 0-255. This field is required only if its relative checkbox (IPv4 Destination 1, 2, 3 or 4) is checked.
- IPv6 Destination—following the instructions of IPv4.
- Community String -Displays the SNMP community name

Email Settings

This allows you to enable email alert and specify email address to receive alert message.

Email Alert	Enable	Destination E-mail Address	Email Description	Test
Email Alert 1	<input type="checkbox"/>		MergePoint email ale	<input type="button" value="Send Alert 1"/>
Email Alert 2	<input type="checkbox"/>		MergePoint email ale	<input type="button" value="Send Alert 2"/>
Email Alert 3	<input type="checkbox"/>		MergePoint email ale	<input type="button" value="Send Alert 3"/>
Email Alert 4	<input type="checkbox"/>		MergePoint email ale	<input type="button" value="Send Alert 4"/>

SMTP (e-mail) Server IP Address
SMTP IP Address: 0.0.0.0

- Email Alert Number-- Support to set up four email destinations to receive alerts

- Enable—Activate email address settings.
- Destination Email Address—Specifies where receive the alert messages
- Email Description—Configures the email alert description.
- Send alert—Initiates the request to send a test email to the email address
- SMTP (e-mail) Server IP Address—Configures the SMTP email server IP address. Only numerical values between 0-255 are allowed.

vKVM & vMedia

The screenshot shows the 'Virtual KVM and Media Configuration' page of the HP ProLiant MicroServer Management Software. The left sidebar contains a navigation menu with items like 'HP ProLiant MicroServer Remote Access Card Properties', 'Configuration', 'Network', 'Network Security', 'Security', 'Users', 'Services', 'IPMI', 'Sessions', 'Update', 'Utilities', 'Server Information', 'Power', 'Control', 'Thermal', 'Fan', 'Temperatures', 'System Event Log', 'Event Management', 'Platform Events', 'Trap Settings', 'Email Settings', and 'vkVM & vMedia'. The main content area is divided into two sections: 'Virtual KVM Configuration' and 'Virtual Media Configuration'. The 'Virtual KVM Configuration' section includes fields for 'Enabled' (checked), 'Max Sessions' (set to 4), 'Active Sessions' (set to 1), 'Remote Port' (set to 2068), and 'Video Encryption Enabled' (checked). The 'Virtual Media Configuration' section includes fields for 'Max Sessions' (set to 1), 'Active Sessions' (set to 0), 'Encryption Enabled' (unchecked), and 'Floppy Emulation' (unchecked). A 'Launch KVM Viewer' button is located above the KVM configuration table, and an 'Apply Changes' button is located above the VM configuration table.

By BIOS default setting, when the Remote Access Card is plugged in, the server will export VGA signals from the VGA connector on this access card automatically. Meaning, when having the Remote Access Card installed, the embedded VGA on the mother board will not function.

Using Virtual KVM Configuration

The Virtual KVM (or vKVM) feature is a remote graphic console that turns a supported browser into a virtual desktop and provides control over the display, keyboard/keyboard shortcuts, video settings, and mouse of the host server. The virtual KVM sessions that display remote host server activities, including shutdown and startup operations.

The remote virtual KVM session requires Java version 1.5.7 or later on the client system. To download the recommended Java for your system configuration, refer to this [HP website](#).

Start a Virtual KVM Session.

To start a virtual KVM session, using a web browser:

1. Download the recommended JVM from HP website and install on the client system. Please refer to "JVM Support".
2. The default setting of vKVM is disabled.

3. Check the “Enabled” item, and click the “Apply Changes” button.

4. Click “Launch KVM Viewer” to start a KVM session.

There are five different menu bars in virtual KVM session window: File, View, Macros and Tools and Help.

- File-- Including two submenus Capture/Exit.
- The capture to file is used to capture an image and allows saving the file to a specified location on client. The exit submenu is used to close virtual session window.
- View--Refresh/Full Screen/Windowed Mode
- Select Refresh to update the view of the Video Viewer. This will result in the Viewer requesting a reference video frame from the server. Select Full Screen to make the Video Viewer enter into Full Screen Mode. Select Windowed to exit out of Full Screen mode. Select fit to resize the Video Viewer window to the minimum size that is needed to display the server's video (This menu item is not available in Full Screen mode).
- Macros--- keyboard shortcuts
- These drop-down list keyboard shortcuts can be used as virtual keys and are similar to the keys the physical Keyboard of your local machine. You can select one of the drop-down list keyboard shortcuts (either the macro or the hotkey specified for the macro), to execute the macro on the

remote system. For example, when you press the Ctrl+Alt+Del keys on the physical keyboard in local system, the Task Manager of your local machine appears in addition to the task manager on the server.

- Tools—Session Options/Session user list/Stats
- The Session Options window allows you to control client configuration settings with additional general, mouse, video quality viewer control adjustments and stats.
- General— You can control the keyboard pass-through mode and select pass all keystrokes to pass your management station's keystrokes to the remote system. Some keystrokes are intercepted by the management station OS and will not be passed on.
- Mouse Acceleration --To optimize mouse performance, click the Mouse tab and depending on the operating system, select the Mouse Acceleration option. Then click Apply and OK to close the Session Options window.
- Video Quality—The compression modes allow for a low quality (420) or high quality (444) compression configuration. The Luminance and Chrominance settings allow for picture color configuration.
- Stats—This menu option launches a dialog which displays viewer performance statistics: Frame Rate, Bandwidth, Compression and Packet Rate.
- Help—Contents and Index/About
- Contents and Index— Inform to get online help by clicking the help link on the vKVM&vMedia page
- About— Displays an About box, which specifies KVM version

Using Virtual Media Configuration

Virtual Media (or vMedia) provides a virtual media drive, which allows a floppy image, floppy drive or CD/DVD drive on your client, to be available on the managed system's console as if the floppy image or drive were present on the local system. At most four virtual media devices may be attached at one time.

Virtual Media shall support the following client devices:

- Floppy disks
- CD-ROMs
- DVD-ROMs
- USB mass storage devices
- ISO images

Start a Virtual Media session

To start a virtual Media session, using a web browser:


1. Download the recommended JVM from HP website and install on the client system. Please refer to "JVM Support".
2. Click "Launch VM viewer button."

3. The virtual media sessions will start according the device on your client (USB key, floppy etc.).


Sharing a virtual media device (Floppy)

- 1 Prepare the media you want to add, take floppy device as example. Insert floppy disk in your local system.
- 2 Start a virtual Media session, the Virtual Media will display the list of devices available for mapping in Virtual Media session
- 3 Select the mapped checkbox for the device (A: Floppy), the option window will be opened. Then click yes button on the prompted window.

Note: If you only want to read the mapped device, please select read only checkbox before it is mapped.

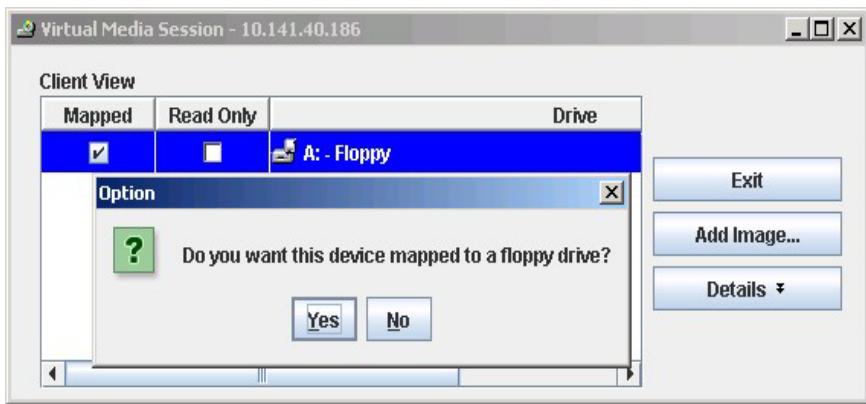


4 The virtualized drive appears in remote system as a real drive with a new drive letter.

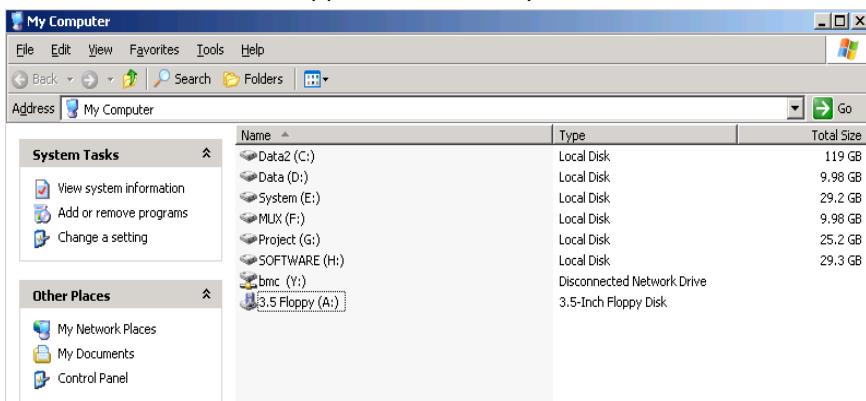


Adding the ISO image

1. Start a virtual Media session and click the Add Image button

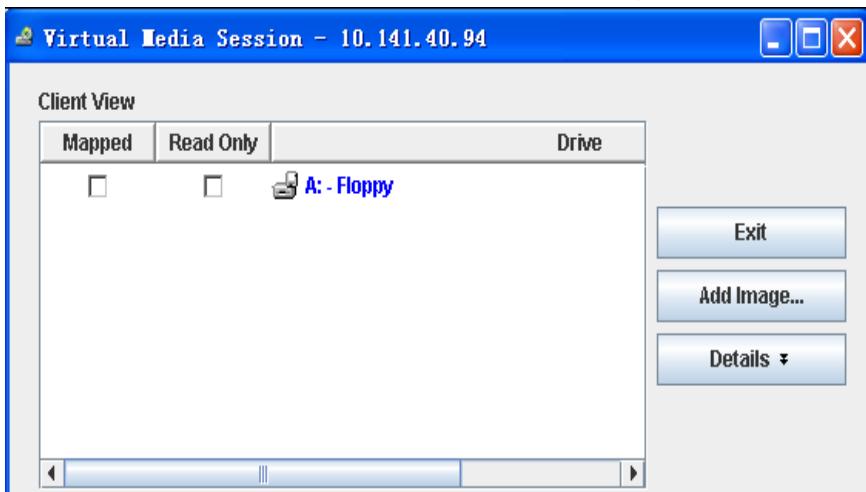


2. On the open dialog window, select the ISO image file in your local system and click open button.

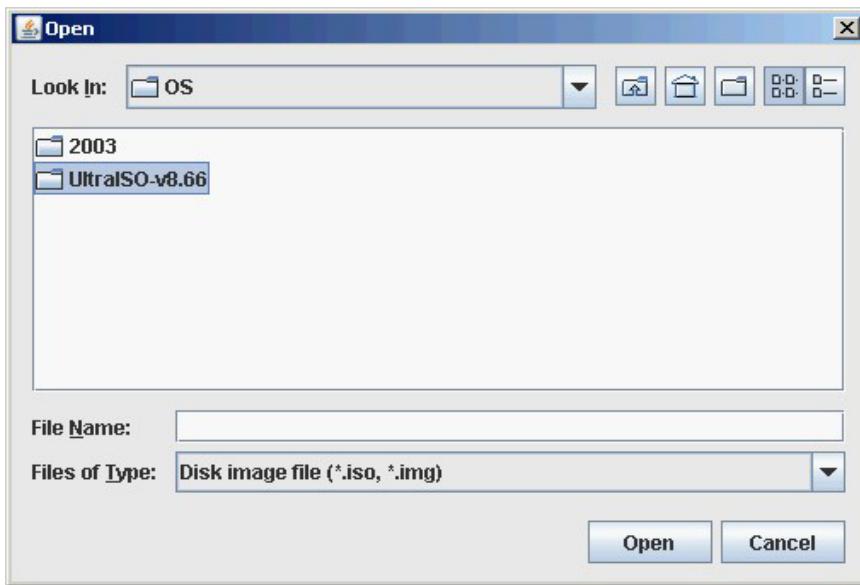

3. Select the mapped checkbox for the ISO Image

Note: If you want to read only the ISO image, please select read only checkbox before it is mapped.

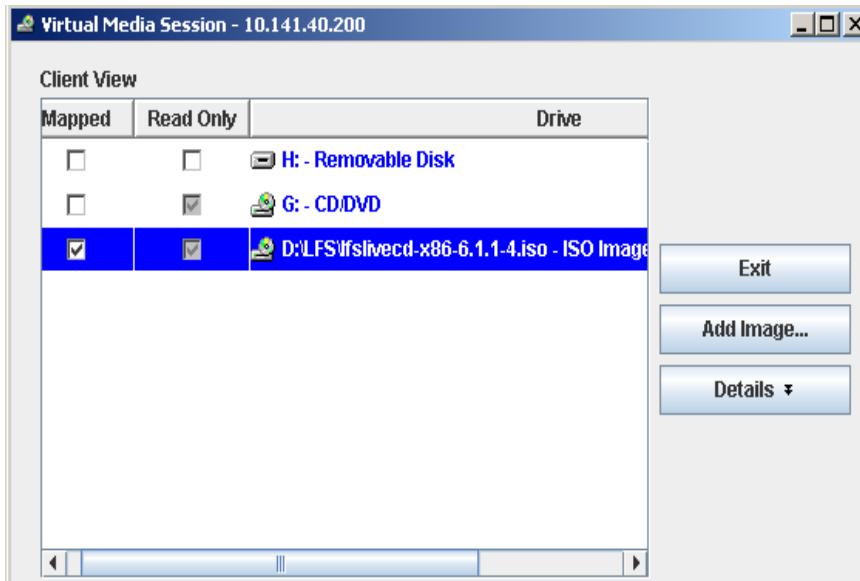


The ISO Image file is available in remote system

Using BMC SMCLP

The SMASH CLP is designed for users who prefer a non-graphical interface. The SMASH CLP chapter describes the syntax and the ways to remote control server.

If you want to access BMC SMCLP, you need to have a SSH client (putty or others). When BMC is working normally and having valid IP address, you can access BMC SMCLP via the SSH client. Please refer to “Logging in to BMC SMCLP for the first time”, to get details about accessing SMCLP.

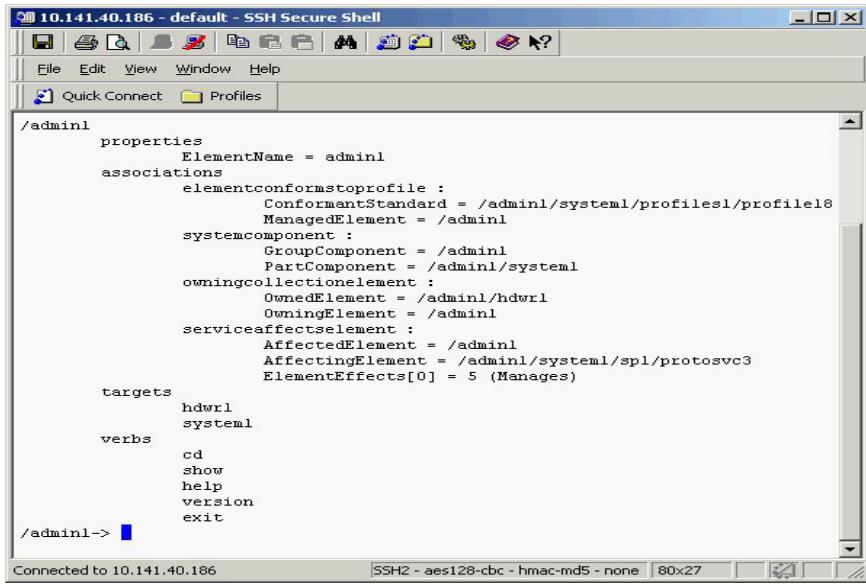

The screenshot shows an SSH Secure Shell window titled "10.141.40.186 - default - SSH Secure Shell". The window has a menu bar with File, Edit, View, Window, Help, and a toolbar with various icons. Below the toolbar is a "Quick Connect" button and a "Profiles" dropdown. The main pane displays a command-line session:

```
/admin1
properties
    ElementName = admin1
associations
    elementconformstoprofile :
        ConformantStandard = /admin1/system1/profiles1/profile18
        ManagedElement = /admin1
systemcomponent :
    GroupComponent = /admin1
    PartComponent = /admin1/system1
owningcollectionelement :
    OwnedElement = /admin1/hdwrl
    OwningElement = /admin1
serviceaffectselement :
    AffectedElement = /admin1
    AffectingElement = /admin1/system1/spl/protosvc3
    ElementEffects[0] = 5 (Manages)
targets
    hdwrl
    system1
verbs
    cd
    show
    help
    version
    exit
/admin1-> [blue square]
```

The status bar at the bottom indicates "Connected to 10.141.40.186", "SSH2 - aes128-cbc - hmac-md5 - none", and "80x27".

The “verbs” shows the all the supported verbs under current directory. And “targets” show all the directories under current directory. Use “cd target” command, you can enter the existent directory. Use “cd ..” you can return parent directory

Get CPU/Memory Info


Enter /admin1/system1/cpu1, and you can get CPU info with “show” verb.

The screenshot shows a terminal window titled "10.141.40.186 - default - SSH Secure Shell". The window has a menu bar with File, Edit, View, Window, and Help. Below the menu is a toolbar with icons for copy, paste, find, etc. A tab bar shows "Quick Connect" and "Profiles". The main pane displays the following command-line session:

```
/admin1/system1-> cd cpul
/admin1/system1/cpul
/admin1/system1/cpul-> show
/admin1/system1/cpul
    properties
        CPUStatus = 1 (CPU Enabled)
        CurrentClockSpeed = 1500
        ElementName = AMD Turion(tm) II Neo N40L Dual-Core Processor
        EnabledState = 2 (Enabled)
        ExternalBusClockSpeed = 200
        Family = 513
        HealthState = 5 (OK)
        MaxClockSpeed = 2200
        OperationalStatus[0] = 2 (OK)
        RequestedState = 12 (Not Applicable)
    associations
        realizes :
            Antecedent = NULL
            Dependent = /admin1/system1/cpul
    systemdevice :
        GroupComponent = /admin1/system1
        PartComponent = /admin1/system1/cpul
    elementcapabilities :
        Capabilities = NULL
        ManagedElement = /admin1/system1/cpul
targets
verbs
    cd
    show
    help
    version
    exit
/admin1/system1/cpul->
```

At the bottom, status information is shown: Connected to 10.141.40.186, SSH2 - aes128-cbc - hmac-md5 - none, 80x33.

Enter /admin1/system1/memory1, and you can get memory info with "show" verb.

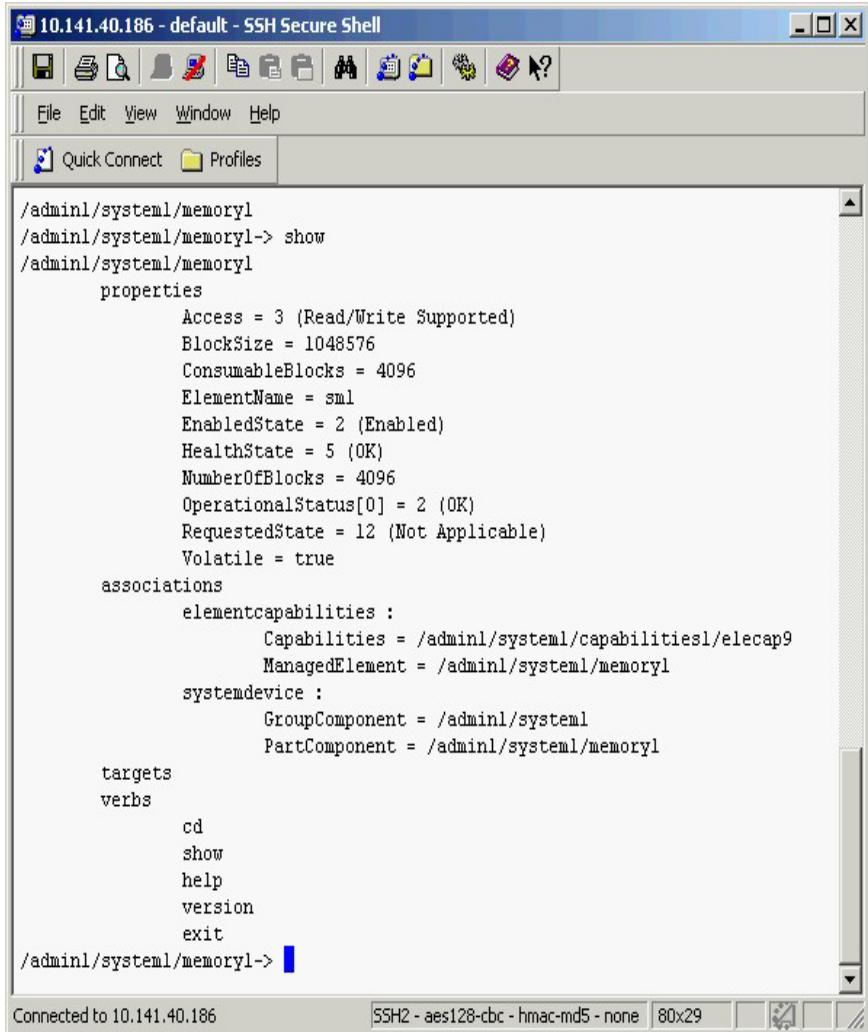

The screenshot shows an SSH session titled "10.141.40.186 - default - SSH Secure Shell". The terminal window displays the following SMCLP command output:

```
/admin1/system1/memory1
/admin1/system1/memory1-> show
/admin1/system1/memory1
    properties
        Access = 3 (Read/Write Supported)
        BlockSize = 1048576
        ConsumableBlocks = 4096
        ElementName = sml
        EnabledState = 2 (Enabled)
        HealthState = 5 (OK)
        NumberOfBlocks = 4096
        OperationalStatus[0] = 2 (OK)
        RequestedState = 12 (Not Applicable)
        Volatile = true
    associations
        elementcapabilities :
            Capabilities = /admin1/system1/capabilities1/elecap9
            ManagedElement = /admin1/system1/memory1
        systemdevice :
            GroupComponent = /admin1/system1
            PartComponent = /admin1/system1/memory1
    targets
    verbs
        cd
        show
        help
        version
        exit
/admin1/system1/memory1->
```

At the bottom of the window, status information is displayed: "Connected to 10.141.40.186", "SSH2 - aes128-cbc - hmac-md5 - none", and "80x29".

Get Thermal Reading/Get Fan Speed Reading

There are three thermal sensors and one fan sensors. The relations between the sensors and SMCLP target as below:

"numericsensor1" is the target of "CPU_THERMAL" sensor.

"numericsensor2" is the target of "NB_THERMAL" sensor.

"numericsensor3" is the target of "AMBIENT_THERMAL" sensor.

"numericsensor4" is the target of "SYS_FAN" sensor.

Please notice the "unit" of reading. Below pictures show the read method and the related between SMCLP and the Web UI.

10.141.40.186 - default - SSH Secure Shell

File Edit View Window Help

Quick Connect Profiles

```
/admin1/system1/sensor1/numericsensor1-> show
/admin1/system1/sensor1/numericsensor1
    properties
        BaseUnits = 2 (Degrees C)
        CurrentReading = 470
        CurrentState = Normal
        ElementName = CPU_TEMHAL(32.0.32)
        EnabledState = 2 (Enabled)
        HealthState = 5 (OK)
        OperationalStatus[0] = 2 (OK)
        PossibleStates[0] = Non-Critical
        PossibleStates[1] = Lower Non-Critical
        PossibleStates[2] = Upper Non-Critical
        PossibleStates[3] = Critical
        PossibleStates[4] = Lower Critical
        PossibleStates[5] = Upper Critical
        PossibleStates[6] = Fatal
        PossibleStates[7] = Lower Fatal
        PossibleStates[8] = Upper Fatal
        PossibleStates[9] = Normal
        PossibleStates[10] = Unknown
        RateUnits = 0 (None)
        RequestedState = 12 (Not Applicable)
        SensorType = 2 (Temperature)
        SettableThresholds[0] = 3 (UpperThresholdCritical)
        SettableThresholds[1] = 1 (UpperThresholdNonCritical)
        SupportedThresholds[0] = 3 (UpperThresholdCritical)
        SupportedThresholds[1] = 1 (UpperThresholdNonCritical)
        UnitModifier = -1
    associations
        memberofcollection :
            Collection = /admin1/system1/sensor1
            Member = /admin1/system1/sensor1/numericsensor1
        elementcapabilities :
            Capabilities = /admin1/system1/capabilities1/elecap5
            ManagedElement = /admin1/system1/sensor1/numericsensor1
        systemdevice :
            GroupComponent = /admin1/system1
            PartComponent = /admin1/system1/sensor1/numericsensor1
    targets
    verbs
        cd
```

Connected to 10.141.40.186 SSH2 - aes128-cbc - hmac-md5 - none | 80x42

hp HP ProLiant MicroServer Remote Access Card

Support Help About Logout
Welcome admin (Administrator)

- HP ProLiant MicroServer Remote Access Card
 - Properties
 - Configuration
 - Network
 - Network Security
 - Security
 - Users
 - Services
 - IPMI
 - Sessions
 - Update
 - Utilities
- Server Information
 - Power
 - Control
 - Thermal
 - Fan
 - Temperatures
- System Event Log
- Event Management
 - Platform Events
 - Trap Settings
 - Email Settings
- vKVM & vMedia

Temperatures

Refresh

Status	Probe Name	Reading	Warning Threshold	Failure Threshold
Green	CPU_THERMAL	43.0 C	105.0C	110.0C
Green	NB_THERMAL	43.0 C	100.0C	105.0C
Green	AMBIENT_THERMAL	28.0 C	40.0C	45.0C

10.141.40.186 - default - SSH Secure Shell

```
/admin1/system1/sensors1/numericsensor4
properties
  BaseUnits = 19 (RPM)
  CurrentReading = 1200
  CurrentState = Normal
  ElementName = SYS_FAN(16.0.32)
  EnabledState = 1 (Enabled)
  HealthState = 5 (OK)
  OperationalStatus[0] = 2 (OK)
  PossibleStates[0] = Non-Critical
  PossibleStates[1] = Low Non-Critical
  PossibleStates[2] = Upper Non-Critical
  PossibleStates[3] = Critical
  PossibleStates[4] = Lower Critical
  PossibleStates[5] = Upper Critical
  PossibleStates[6] = Fatal
  PossibleStates[7] = Upper Fatal
  PossibleStates[8] = Normal
  PossibleStates[10] = Unknown
  RequestedState = 0 (None)
  RequestedState = 12 (Not Applicable)
  sensorType = 5 (Tachometer)
  SettableThresholds[0] = 2 (LowerThresholdCritical)
  SettableThresholds[1] = 0 (LowerThresholdNonCritical)
  SupportedThresholds[0] = 2 (LowerThresholdCritical)
  SupportedThresholds[1] = 0 (LowerThresholdNonCritical)
  UnitModifier = 0
associations
  memberofcollection :
    collection = /admin1/system1/sensors1
    Member = /admin1/system1/sensors1/numericsensor4
  elementcapabilities :
    Capabilities = /admin1/system1/capabilities1/electric
    ManagedElement = /admin1/system1/sensors1/numericsensor4
  systemdevice :
    PartComponent = /admin1/system1
    PartComponent = /admin1/system1/sensors1/numericsensor4
  associatedsensor :
    Antecedent = /admin1/system1/sensors1/numericsensor4
    Dependent = /admin1/system1/fan1
targets
Connected to 10.141.40.186
SSH2 - aes128-cbc - hmac-md5 - none | 80x42
```

hp HP ProLiant MicroServer Remote Access Card

Support Help About Logout
Welcome admin (Administrator)

- HP ProLiant MicroServer Remote Access Card
 - Properties
 - Configuration
 - Network
 - Network Security
 - Security
 - Users
 - Services
 - IPMI
 - Sessions
 - Update
 - Utilities
- Server Information
 - Power
 - Control
 - Thermal
 - Fan
 - Temperatures
- System Event Log
- Event Management
 - Platform Events
 - Trap Settings
 - Email Settings
- vKVM & vMedia

Fan

Refresh


Probe List

Status	Probe Name	Reading	Warning Threshold	Failure Threshold
Green	SYS_FAN	1200 RPM	500RPM	0RPM

Get Fan Status

The target "fan1" can show fan status. When fan works OK, it will show status (OK). When fan fails, it can report the fan fail status. As below:

When fan status is OK,

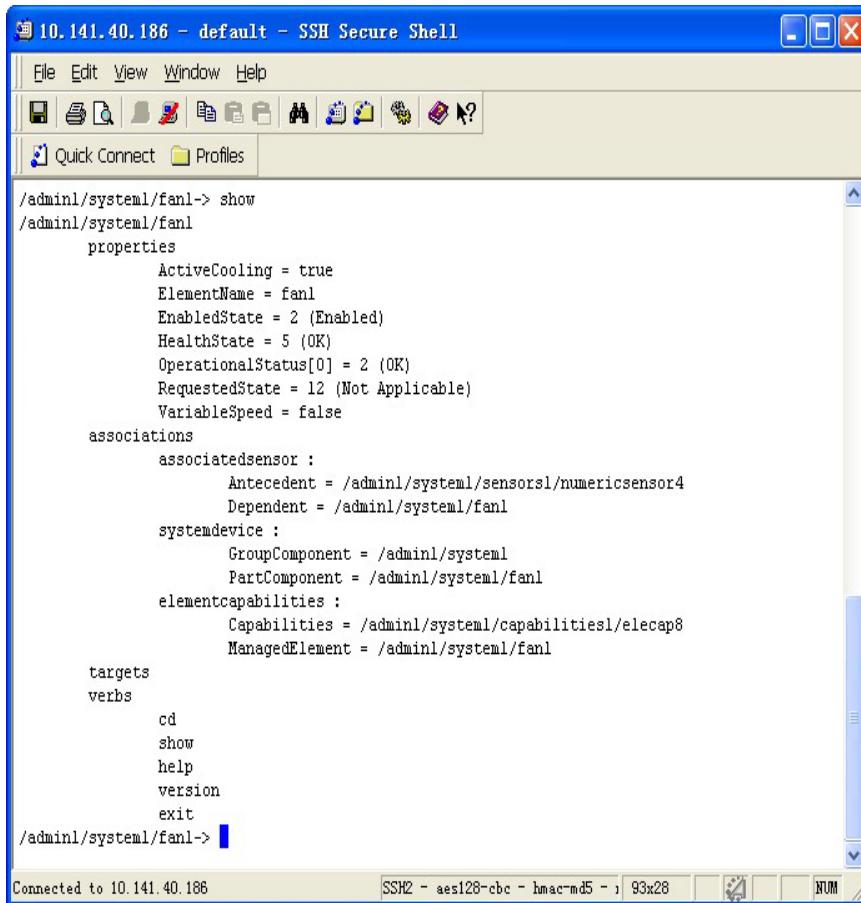

A screenshot of a Windows terminal window titled "10.141.40.186 - default - SSH Secure Shell". The window contains the following command-line session:

```
/admin1/system1/fan1-> show
/admin1/system1/fan1
properties
    ActiveCooling = true
    ElementName = fan1
    EnabledState = 2 (Enabled)
    HealthState = 5 (OK)
    OperationalStatus[0] = 2 (OK)
    RequestedState = 12 (Not Applicable)
    VariableSpeed = false
associations
    associatedsensor :
        Antecedent = /admin1/system1/sensors1/numericsensor4
        Dependent = /admin1/system1/fan1
systemdevice :
    GroupComponent = /admin1/system1
    PartComponent = /admin1/system1/fan1
elementcapabilities :
    Capabilities = /admin1/system1/capabilities1/elecap8
    ManagedElement = /admin1/system1/fan1
targets
verbs
    cd
    show
    help
    version
    exit
/admin1/system1/fan1->
```

The terminal window has a menu bar with File, Edit, View, Window, Help. Below the menu is a toolbar with icons for copy, paste, find, etc. A tab bar at the bottom shows "Quick Connect" and "Profiles". The status bar at the bottom left says "Connected to 10.141.40.186" and "SSH2 - aes128-cbc - hmac-md5 - 93x28". The status bar also includes standard Windows icons for zoom, minimize, maximize, and close.

When fan is failure,

```

10.141.40.186 - default - SSH Secure Shell
File Edit View Window Help
Quick Connect Profiles
/admin1/system1/fan1-> show
/admin1/system1/fan1
properties
    ActiveCooling = true
    ElementName = fan1
    EnabledState = 2 (Enabled)
    HealthState = 25 (Critical failure)
    OperationalStatus[0] = 6 (Error)
    RequestedState = 12 (Not Applicable)
    VariableSpeed = false
associations
    associatedsensor :
        Antecedent = /admin1/system1/sensors1/numericsensor4
        Dependent = /admin1/system1/fan1
    systemdevice :
        GroupComponent = /admin1/system1
        PartComponent = /admin1/system1/fan1
elementcapabilities :
    Capabilities = /admin1/system1/capabilities1/elecap8
    ManagedElement = /admin1/system1/fan1
targets
verbs
    cd
    show
    help
    version
    exit
/admin1/system1/fan1->
Connected to 10.141.40.186  SSH2 - aes128-cbc - hmac-md5 - ; 93x28  NUM

```

SMCLP Power Control Function

Under "system1", it has the verbs "start", "stop" and "reset".

"start" can power on the server, when the server in standby.

"stop" can power off the server, when the server in working.

"reset" can hard reset the server.

```

10.141.40.186 - default - SSH Secure Shell
File Edit View Window Help
Quick Connect Profiles
/admin1/system1-> stop
/admin1/system1 stopped at Sun Jul 3 15:55:26 2011

/admin1/system1-> start
/admin1/system1 started at Sun Jul 3 15:55:46 2011

/admin1/system1-> reset
/admin1/system1 reset at Sun Jul 3 15:56:05 2011

/admin1/system1->
Connected to 10.141.40.186  SSH2 - aes128-cbc - hmac-md5 - ; 87x11  NUM

```

Frequently Asked Questions (FAQ)

Recovering a BMC username and password

BMC supports the IPMI command “Set User Password”. So when forgetting user name or password, you can use IPMI command to get the username and reset the user password under DOS or Linux.

Example,

There is a default user “admin” as the picture below:

The screenshot shows a Microsoft Internet Explorer window titled "HP ProLiant MicroServer Management Software - Microsoft Internet Explorer". The URL is "http://10.141.40.168/index.html". The main content area is titled "HP ProLiant MicroServer Remote Access Card" and "Users". On the left, there is a navigation menu with sections like "HP ProLiant MicroServer Remote Access Card Properties", "Configuration", "Network", "Network Security", "Security", "Users", "Services", "IPMI", "Sessions", "Update", "Utilities", "Server Information", "Power", "Control", "Thermal", "Fan", "Temperatures", "System Event Log", and "Event Management". A message says "To configure a particular user, click the User ID.". Below is a table with the following data:

User ID	State	User Name	User Role	IPMI LAN Privilege
1	Disabled		None	None
2	Enabled	admin	Administrator	Administrator
3	Disabled		None	Administrator
4	Disabled		None	None
5	Disabled		None	None
6	Disabled		None	None
7	Disabled		None	None
8	Disabled		None	None
9	Disabled		None	None
10	Disabled		None	None
11	Disabled		None	None
12	Disabled		None	None
13	Disabled		None	None
14	Disabled		None	None
15	Disabled		None	None
16	Disabled		None	None

Under DOS:

Get the user name:

Ipmitool 20 18 46 2 (the value “2” is the User ID)

Set user password:

Ipmitool 20 18 47 02 02 + password. (Password is ASCII value: 16 bytes)

```
C:\>ipmitool 20 18 46 2  
20 1c 46 00 61 64 6d 69 6e 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00  
ASCII "61 64 6d 69 6e" is  
"admin"  
C:\>ipmitool 20 18 47 2 2 61 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00  
20 1c 47 00  
password:a  
C:\>
```

Under Linux shell:

Get the user name:

Ipmitool raw 0x6 0x46 0x02. (the value “2” is the User ID)

Set user password:

Ipmitool raw 0x6 0x47 0x02 0x02 + password (Password is ASCII value: 16 bytes)

```

File Edit View Terminal Tabs Help
[root@localhost ~]# ipmitool raw 0x06 0x46 0x02      ASCII "61 4d 6d 69 6e" denotes "admin"
61 4d 6d 69 6e 00 00 00 00 00 00 00 00 00 00 00 00 00
[root@localhost ~]# ipmitool raw 0x06 0x47 0x02 0x2  0x61 0x0 0x0
[root@localhost ~]#                                         New password:a

```

About how to get ipmitool, please review "[IPMI Messaging interface](#)".

Verifying that the BMC firmware is functioning

Open the front panel of the server chassis, and check the heartbeat LED (CR1, which location is near the "Aspeed" chipset) on the Remote Access Card. Normally, it should blink with one second interval. If not, the BMC firmware should work abnormally.

Under OS, you can send IPMI command (Get Self Test Result) to BMC to check the whether the response values right or not. If not, BMC should work abnormally. Please refer to IPMI specification 2.0 to get detail info.

Under DOS:

```

Ipmitool 20 18 4
C:\>ipmitool 20 18 4      55 00 : BMC all self test
20 1c 04 00 55 00          pass.

```

Under Linux (shell):

Ipmitool raw 0x6 0x4

Recovering from a BMC firmware crash

When BMC firmware crashes, and you fail to update BMC firmware via BMC WebUI. You can attempt to update BMC firmware via PCIE method. (The update BMC firmware method via PCIE can run without regard to BMC firmware ok or not). Please refer to "[Update BMC Firmware under DOS mode, Windows, Linux](#)"

How to configure BMC

BMC supports various interfaces for configuration and operation. This guide discusses the following Interfaces:

1. BIOS RBSU -> Advanced -> IPMI Configuration page can be used when the system environment does not use DHCP, DNS, or WINS.
2. Browser-based setup can be used when you can connect to BMC on the network using a browser. This method can also reconfigure a previously configured BMC.
3. SMASH CLP can be used when a command line is accessible through telnet, SSH.

Troubleshooting BMC

Heartbeat LED Indicator

The Heartbeat LED (CR1, which location is near the “Aspeed” chipset) is used to indicate whether the BMC work normally or not. When BMC firmware works normally, it should blink with one second interval. Otherwise, the BMC firmware should be in ill.

When encounter this failure, you should remove the server power and reboot the server (unplug the server power cable, and then plug it again) to let BMC reboot. If the heartbeat LED still works abnormally after server power on, you can attempt to flash the latest BMC firmware via the method “[Update BMC Firmware under DOS mode, Windows, Linux](#)”.

System Event Log Entries

Event Log Display	Event Log explanation
EvtLogDisabled: Event Log sensor, Log Area Reset/Cleared was asserted	When clear SEL via Web UI “clear log” or using IPMI command.
Sys Pwr Monitor: Power Unit sensor, Power Off / Power Down was asserted	When power off the server.
Sys Pwr Monitor: Power Unit sensor, Power Off / Power Down was deasserted	When power on the server.
SYS_FAN: Fan sensor, failure event was asserted	When fan unplugged or failed.
SYS_FAN: Fan sensor, failure event was deasserted	When fan recovers working normally from a failure or unplugged condition.
CPU_THERMAL: Temperature sensor, warning event was asserted	When CPU temperature upper warning threshold going high
CPU_THERMAL: Temperature sensor, warning event was deasserted	When CPU temperature return lower warning threshold
CPU_THERMAL: Temperature sensor, failure event was asserted	When CPU temperature upper failure threshold going high
NB_THERMAL: Temperature sensor, warning event was asserted	When North Bridge temperature upper warning threshold going high
NB_THERMAL: Temperature sensor, warning event was deasserted	When North Bridge temperature return lower warning threshold
NB_THERMAL: Temperature sensor,	When North Bridge temperature upper failure

failure event was asserted	threshold going high
AMBIENT_THERMAL: Temperature sensor, warning event was asserted	When ambient temperature upper warning threshold going high
AMBIENT_THERMAL: Temperature sensor, warning event was deasserted	When ambient temperature return lower warning threshold
AMBIENT_THERMAL: Temperature sensor, failure event was asserted	When ambient temperature upper failure threshold going high
SEL Rate: Other FRU sensor, Warning event was asserted	Non-critical for SEL rate: The SEL storage space is 25% in remaining.
EvtLogDisabled: Event Log sensor, SEL Almost Full was asserted	Warning for SEL space: The SEL storage space is 20% in remaining.
SEL Rate: Other FRU sensor, failure event was asserted	Critical for SEL rate: The SEL storage space is 10% in remaining.
EvtLogDisabled: Event Log sensor, SEL Full was asserted	Out of space: EventLog could not be recorded because of a lack of storage space
System Software event: Memory sensor	Uncorrectable ECC/other uncorrectable memory error

JVM Support

When you want to use the function vKVM or vMedia, please make sure that JVM is installed on your client. Please see this [HP website](#) for the download link.

Login Issues

Use the following information when attempting to resolve login issues:

- Try the default login, which is located on the network settings tag.
- If you forget your password, an administrator with the Administer User Accounts privilege can reset it.
- If an administrator forgets his username or her password, the administrator can use the IPMI command method to get username and reset password. Please review “*How to get username and password when forgetting the BMC login user name and password*”.
- Check for standard problems, such as:
 - Is the password complying with password restrictions? For example, are there case sensitive characters in the password?
 - Is an unsupported browser being used?

Firewall Issues

BMC communicates through several configurable TCP/IP ports. If these ports are blocked, the administrator must configure the firewall to allow for communications on these ports. See the Administration section of the BMC user interface to view or change port configurations.

Proxy server issues

If the Web browser software is configured to use a proxy server, it will not connect to the BMC IP address. To resolve this issue, configure the browser not to use the proxy server for the IP address of BMC. For example, in Internet Explorer, select Tools-> Internet Options-> Connections-> LAN Settings-> Advanced, and then enter the BMC IP address or DNS name in the Exceptions field.

Glossary

BMC	Baseboard Management Controller
CLP	Command Line Protocol
DNS	Domain Name System
GUI	Graphical user interface.
IP	Internet Protocol
IPMI	Intelligent Platform Management Interface
KCS	Keyboard Controller Style
KVM	Keyboard, Video, and Mouse
LAN	Local Area Network
LED	Light-Emitting Diode
MAC	Media Access Control
NVRAM	Non Volatile Memory
PCIE	PCI Express
POST	Power On Self Test
RBSU	ROM Based Setup Utility
SEL	System Event Log
SMASH	System Management Architecture for Server Hardware
SSH	Secure Shell
SSL	Secure Sockets Layer
SNMP	Simple Network Management Protocol
TCP	Transmission Control Protocol
USB	Universal Serial Bus
VLAN	Virtual LAN Area Network
Web UI	BMC Web User Interface